



**DURAN**  
electrónica

# **DURGAS** & DURGAS Mini

Toxic, explosive, oxygen, refrigerant gases and SF<sub>6</sub> gas detection control panel

## User and Installation manual



FS82426





# RANGE OF COMPATIBLE PRODUCTS



**DURGAS mini control panel 1 MODULE LINE.**



**Remote relays module.**



**DURGAS Module line display unit.**



**DURGAS Module line.**



**Power Supply Control Module.**



**DURPARK RS485 NO<sub>2</sub> detector.**



**Integra II Module MODBUS RTU**



**DURPARK RS485 CO detector.**

	pag.
1. INTRODUCTION	6
2. PREVIOUS CONSIDERATIONS	7
3. OPTICAL INDICATORS	9
4. INSTALLATION and CONFIGURATION OF OPTIONAL 8 INPUT 4-20mA MODULES	10
5. INSTALLATION and CONFIGURATION OF OPTIONAL 4 RELAY MODULES	10
6. RANGES (f.s.), ALARM and VENTILATION LEVELS AVAILABLE FOR THE VARIOUS GASES	11
7. Ranges, (f.s) ALARM LEVELS AVAILABLE FOR REFRIGERANT GASES	12
8. PROGRAMMING THE DETECTOR NUMBER USING SW1 (addressing)	13
9. RELAY ACTIVATION DEPENDING ON STANDARDS AND GROUPS PROGRAMMED	14
10. MODULE LINE BEHAVIOUR IN CASE OF POWER SUPPLY CUT	14
11. EQUIPMENT OPERATION PROTOCOLS, EMERGENCY MODES	14
12. FACTORY DEFAULT CONFIGURATION FOR THE DETECTION OF CARBON MONOXIDE (CO) FOR SPANISH and PORTUGUESE STANDARDS	15
13. DISPLAY INFORMATION WITH A DISCONNECTED MODULE LINE, OFF	15
14. KEYPAD FUNCTIONS WITH A DISCONNECTED MODULE LINE, OFF	16
15. SYSTEM PROGRAMMING (ENGINEER MODE, MODULE LINE OFF)	16
16. PROGRAMMING ASSOCIATING RELAY MODULE	18
17. DETECTOR TEST	18
18. SENSOR TEST, ONLY COMPATIBLE WITH DURPARK RS485 DETECTORS	18
19. MODULE LINE START UP	19
20. DISPLAY INFORMATION WITH A CONNECTED MODULE LINE	21
21. LED CODES IN THE DETECTORS (Eurosondelco)	22
22. DISPLAY INFORMATION WITH THE ZONE CONNECTED TO REFRIGERANT GASES	22
23. LED CODES IN DURPARK RS485 DETECTORS	23
24. KEYPAD FUNCTIONS WITH THE MODULE LINE CONNECTED	23
25. INHIBIT DETECTORS FUNCTION	24
26. SENSOR CHANGE (Eurosondelco)	25
27. DETECTOR CALIBRATION (Eurosondelco)	25
28. ZERO ADJUSTMENT (2 modes)	26
29. CALIBRATION TABLES (See data for EXP detectors in their manuals)	27
30. CALIBRATION DATA, SONDELTOX DETECTORS 4-20mA	27
31. POSITIONING OF THE ADJUSTMENT POTENTIOMETERS	28
32. MEASURING POINTS and adjustment potentiometers, CO, NO <sub>2</sub> and O <sub>2</sub> Eurodetectors	28
33. ENTERING CALIBRATION MODE (PUTTING MODULE LINE IN OFF)	29
34. CALIBRATION PROCEDURE FOR CO AND NO <sub>2</sub> DURPARK RS485 DETECTORS	29
35. MODULE LINE PROGRAMMING OPTIONS, ON MODE	31
36. MODULE LINE TECHNICAL CHARACTERISTICS	35
37. TECHNICAL CHARACTERISTICS Eurosondelco CO/NO <sub>2</sub> , RS485-IP65 detectors	36
38. TECHNICAL CHARACTERISTICS CO and NO <sub>2</sub> DURPARK RS485-IP20 DETECTOR	37
39. REMOTE MODULE CHARACTERISTICS	37
40. EURODETECTORS RS485 IP65 GENERAL CONNECTIONS	38
41. DURPARK RS485 DETECTORS CONNECTIONS	39
42. CONNECTING 8 EURODETECTORS RS485+ ONE 4-20mA MODULE	40
43. CONNECTING 8 EURODETECTORS RS485+ ONE 4-20mA MODULE + ONE RELAY MODULE	41
44. CONNECTING TWO 4-20mA MODULES	42
45. AUXILIARY POWER SOURCES INSTALLATION	43
46. WARRANTY	46

## 1. INTRODUCTION.

The new DURGAS control panels have been designed for the simultaneous detection of up to four different gases per module line, widening the field of application for Industry in general, Car Parks and Tunnels.

Equipped with "Plug and Play" technology, it automatically detects the quantity and type of detectors, as well as various devices connected to its loop, and auto configures the ranges, ventilation levels and alarm levels appropriate to each case and gas type, adjusting them to the various current TLVs and standards.

Detectors of any gas and working principle can be connected to each module line loop, in addition to relay modules and 4-20mA to RS485 conversion interfaces.

The system is backward compatible, being able to control the whole detector range of the previous models **EUROSONDELCO, DURTEX, DURTOX, DIREX** manufactured up until now, as well as the new models **DURPARK** RS485 and **STANDGAS LCD** RS485 for detection of toxic and explosive gases.

Two standards can be programmed: Spanish or Portuguese. Five languages can also be programmed: Spanish, English, Portuguese, German and French.

It allows programming up to 4 single ventilation groups, or 3 double speed ventilation groups, therefore allowing individual maneuvers in the case of different gases, or sectoring maneuvers for the same gas. For cases in which 3 gases are used in the same module line, it is possible to program 4 groups and use only three groups.

The control panel is expandable from one to four module lines, with a capacity of up to 16 detectors per module line (64 in total), being able to control detectors for CO, H<sub>2</sub>S, SO<sub>2</sub>, NO, NO<sub>2</sub>, NH<sub>3</sub>, CL<sub>2</sub>, CO<sub>2</sub>, H<sub>2</sub>, N<sub>2</sub>O, refrigerant gases, SF<sub>6</sub> and explosive gases, each one with its different ranges and alarm levels, whatever their communications system, RS485 up to maximum distance of 1Km, or the standard 4-20mA, this last one through the use of an optional interface that converts this signal to RS485 and automatically addresses them, being it possible to connect in one module detectors with both communication systems.

Each module line incorporates four voltage free, switched relay outputs, one switched alarm tension output at 12V, one auxiliary tension output of 12V for device power supply, plus one for loop power supply, all fuse protected, the alarm output, the auxiliary one and the loop one, with automatic rearm fuses.

The maneuver capacity of the module lines is expandable by using remote relay modules that include four maneuver relays plus a general alarm one, all of them with switched outputs, dry contact and fuse protected. They can be connected at any point in the loop up to a maximum of five modules per module line, and allow programming of any type of association between module line relays, remote relay modules and the detectors, being possible to program, for example, the association of one relay for each detector.

Each module line works independently, incorporates a backlit, 16x2 character line LCD display, plus seven optical indications, internal acoustics and a six key keypad.

The control panel includes a 13,8V 5A power supply source, with a module that controls battery charge, presence and status, and date, time and data traffic between module lines, plus a general fault output.













Optionally an RS485/RS232 communications module can be added, which allows integrating the system in MODBUS or OPC-SERVER format.















*A mini **DURGAS** version is also available, not expandable and with a single module line with the same characteristics, without the possibility of integration and with a 2,4A power supply.*

## 2. PREVIOUS CONSIDERATIONS.

---


-  For grid power supply (230 VAC) to the panel, it is recommended to have an independent outlet protected with a 10A bipolar magneto thermal switch.
-  For the correct operation of the various anti-parasitic systems included in the equipment it is necessary to have a good ground connection.
-  Carry out cabling for the relay outputs through different cable ducts to those of the detection loops.
-  For the activation of motors, you must use contactors controlled by the module line relay outputs, or the optional relay modules, never the relay contacts directly.
-  To prevent interferences do not install the equipment or detectors close to electrical panels, motors or variable-frequency drives.
-  Do not drill holes in the cabinet, use the precut holes provided
-  Do not handle or dismantle any module line, detector or mechanism when the equipment is powered.
-  In case of any fuse being broken, always use the fuse value indicated in the documentation or in the printed circuit board. Not following these indications could result in damage to the equipment.
-  The “automatic reset” protection fuses open when they detect a short circuit or consumption increase. If this should happen, disconnect the cables from the control panel terminals, check the cabling, check that the consumption of the elements which it is powering does not exceed the capacity indicated in this manual and wait for some time until the fuse resets.
-  We recommend carrying out the installation with shielded cable 4-wire 2x1.5mm for power supply and 2x0.25mm, twisted pair, for A-B communications. The maximum distance between the control panel and the last detector or device connected to the loop must not exceed 1 Km. Connect the earth drain mesh or cable, only in the control panel, using the accessory supplied.
-  Ensure that the connections between the module lines and the detectors are correct. This is done in parallel and any kind of branching is allowed, as long as the position of the negative and positive supply terminals and the A and B communications terminals are respected. No resistor is needed at the end of the line.
-  Please consider that for longer cabling distances, →400/500m, and due to the drop in voltage in the cable, it may be necessary to install supplementary power supplies, connected throughout the loop, that guarantee the correct supply to the detectors. Increasing the cable section from 1.5 to 2 or even 2.5mm may also help.

-  Before connecting the detectors to the module line loops, make sure that these are disconnected.
-  The gas detector heads in type IP65 toxic gas detectors must be covered at the moment of connection, until the system has stabilized, around 40/60 min.
-  If the control panel is used to control ATEX detectors protecting classified areas, it must be installed outside the classified area.
-  Connect the battery respecting the polarity. Red for positive and black for negative. Only a 12V 7.5Ah battery can be connected.
-  Although the equipment can work without a battery, we recommend that it is used. If at the moment of module line connection there is no battery present, the module line will configure itself to not check battery state. If one is used later on, the equipment will recognize it within 20 s after it is connected.
-  The optimal installation height for CO detectors is 1,8-2m from floor, and its coverage is 200m<sup>2</sup> (according to current Spanish standards).
-  Do not mix in one same loop **DURPARK** RS485 detectors and **EURODETECTORS** detectors.
-  Do not drill holes into the detectors. Use those provided for fastening and use the cable glands included in the IP65 detectors for cable entry, and always hose type.
-  Do not install the detectors or control panels near a heat source.
-  Do not paint the detectors. If you need to paint the area, remove the detectors and, if you installed **DURPARK** RS485 model detectors, cover the base.
-  Do not, in any case, exceed the technical specifications described in the manual without first consulting our technical service.
-  Install the control panel and detectors when all work has been completed in the installation.



### 3. OPTICAL INDICATORS.

All optical indicators have their corresponding identification message on the display.

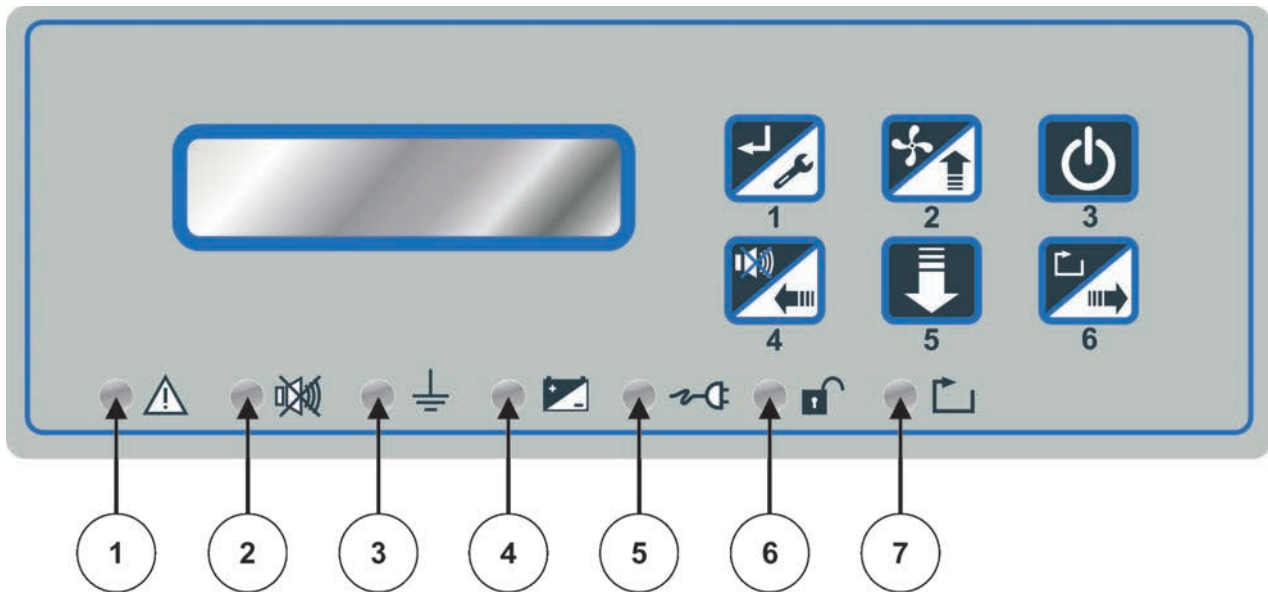

1- General fault optical indicator. It will illuminate for any kind of malfunction.

2- Inhibited acoustics optical indicator, which illuminates to indicate that silent operation has been chosen, or was inhibited when some type of event was activated. With a permanent character, its rearming will happen automatically, only if new fault events appear.

3- Optical indicator for earth fault, it illuminates when some point of the module line cabling is earthed. This indication will illuminate in all module lines simultaneously, even if the earthing happens only in one.

4- Optical indicator of battery fault, it illuminates to indicate that the battery is low in tension, <9V, or in a bad state, or absent after having been included.

5- Optical indicator of grid presence, it illuminates when there is a fault in electrical supply from the power grid 230V AC.

6- Optical indicator of unblocked keypad, it illuminates after typing in the correct password, throughout the time that the keypad remains active, 20s.

7- Optical indication of rearming or manual acknowledging of alarms, only if explosive gas detection (EXP) is programmed in the module line.

## 4. INSTALLATION AND CONFIGURATION OF OPTIONAL 8 INPUT 4-20mA MODULES.

The detectors connected to the interfaces are automatically numbered, following the number of the input to which they are connected.

- **If you select JP1 in ON** for the first interface, the connected detectors will be numbered from 1 to 8, and will belong to **group 1, in the current interfaces SW1-3 in ON**, if you decide to connect just this interface and RS485 format detectors in the same loop, the first RS485 detector must be numbered as number 9.
- **If you select JP1 in OFF** for the second interface, the connected detectors will be numbered from 9 to 16, and will belong to **group 2, in the current interfaces SW1-3 in OFF**, if you decide to connect just this interface and RS485 format detectors in the same loop, the first RS485 detector must be numbered as number 1.

You may also opt for installing one or two 4-20mA in the same loop, without any RS485 format detector.

## 5. INSTALLATION AND CONFIGURATION OF OPTIONAL 4 RELAY MODULES.

Up to five of these modules may be connected per module line, with two possible configurations:

**1<sup>st</sup> MIRROR MODE:** **select SW1-3 ON** (jumper on), when a relay in the module line activates, of the four available belonging to a group, the associated relay will activate in the module, as it is programmed in the module line.



*In this mode the SW1 switch position in the module is ignored*

Operation in mirror mode (associated to a module line)

In the MODULE LINE	In the REMOTE RELAYS MODULE
RL1- On	RL1- On
RL2- On	RL2- On
RL3- On	RL3- On
RL4- On	RL4- On
RL5- ALARM	RL5- On

**2<sup>nd</sup> RELAY MODULE ASSOCIATED TO DETECTORS:** **select SW1-3 OFF** (jumper removed), the relay will activate when its associated detector reaches ventilation level 1, as programmed in the module line.

In this last case, the general alarm relay will not activate.

### SWITCH SW1 CONFIGURATION.

1	2	RELAY	DETECTOR	1	2	RELAY	DETECTOR
ON	ON	RL1	1	OFF	ON	RL1	5
Module Relay 1		RL2	2	Module Relay 2		RL2	6
		RL3	3			RL3	7
		RL4	4			RL4	8
		RL5	ALARM			RL5	ALARM

1	2	RELAY	DETECTOR	1	2	RELAY	DETECTOR
ON	OFF	RL1	9	OFF	OFF	RL1	13
Module Relay 3		RL2	10	Module Relay 4		RL2	14
		RL3	11				RL3
		RL4	12			RL4	16
		RL5	ALARM			RL5	ALARM

You may for example: install 4 modules associated to detectors and a 5th in mirror mode (associated to a module line) to remotely duplicate the maneuvers carried out in the module line.

RELAY TEST:

Short circuit P1 with a metal object.

All the relays of the module will be activated sequentially.



*In this last case, the module line reading mode must be programmed in sequential mode, and the module SW1 switch configuration will be taken into account.*



*See remote relay module characteristics p. 37.*


## 6. RANGES (f.s.), ALARM and VENTILATION LEVELS AVAILABLE FOR THE VARIOUS GASES.

Gas type	Ranges (f.s.)	Programming increase	Minimum programmable level	Maximum programmable level	Factory default levels for Vent1 – Vent2, Alarm Level
Carbon Monoxide CO	0-300 ppm	10 ppm	10 ppm	290 ppm	50-75-100 ppm
Oxygen O <sub>2</sub>	0-25 %	1%	1%	24%	18-15-24% [*1]
Carbon Dioxide CO <sub>2</sub>	0-5.000 ppm	100 ppm	100 ppm	4.500 ppm	1.500-2.000-3.000 ppm
	0-10.000 ppm	100 ppm	100 ppm	9.000 ppm	3.000-4.000-6.000 ppm
	0-20.000 ppm	500 ppm	500 ppm	19.000 ppm	4.000-8.000-12.000 ppm
Nitrogen Dioxide NO <sub>2</sub>	0-20 ppm	0.5 ppm	0.5 ppm	19 ppm	2-5-10 ppm
	0-50 ppm	1 ppm	1 ppm	45 ppm	15-20-25 ppm
	0-100 ppm	1 ppm	1 ppm	90 ppm	25-40-50 ppm
Sulfur Dioxide SO <sub>2</sub>	0-20 ppm	0.5 ppm	0.5 ppm	19 ppm	0,5-1-2 ppm
	0-50 ppm	1 ppm	1 ppm	45 ppm	2-4-10 ppm
	0-100 ppm	1 ppm	1 ppm	90 ppm	15-20-25 ppm
Chlorine CL <sub>2</sub>	0-10 ppm	0.5 ppm	0.5 ppm	9 ppm	0,5-1-2 ppm
	0-20 ppm	0.5 ppm	0.5 ppm	19 ppm	5-8-10 ppm
	0-50 ppm	1 ppm	1 ppm	45 ppm	12-20-25 ppm
Nitrogen Monoxide NO	0-20 ppm	0.5 ppm	0.5 ppm	19 ppm	5-8-10 ppm
	0-50 ppm	1 ppm	1 ppm	45 ppm	15-20-25 ppm
	0-100 ppm	1 ppm	1 ppm	90 ppm	25-50-75 ppm
Ammonia NH <sub>3</sub>	0-20 ppm	0.5 ppm	0.5 ppm	19 ppm	5-8-10 ppm
	0-50 ppm	1 ppm	1 ppm	45 ppm	15-20-25 ppm
	0-100 ppm	1 ppm	1 ppm	90 ppm	25-50-75 ppm
Hydrogen Sulfide H <sub>2</sub> S	0-20 ppm	0.5 ppm	0.5 ppm	19 ppm	5-8-10 ppm
	0-50 ppm	1 ppm	1 ppm	45 ppm	15-20-25 ppm
	0-100 ppm	1 ppm	1 ppm	90 ppm	25-40-50 ppm
Explosive Gases EXP	0-100% L.E.L	1% L.E.L	10% L.E.L	80% L.E.L	20%-40% L.I.E [*2] Prealarm/Alarm
Oxido nitrogeno (I) N <sub>2</sub> O	0-1000ppm	10ppm	10ppm	990	20/40/60 ppm
Acido Clorhidrico HCL	0-50ppm	1ppm	1ppm	45ppm	2-5-10ppm

\*[1] Alarm level increasing, Vent 1 and Vent 2 for decreasing level.


\*[2] 2 levels only in Portuguese standard.


## 7. RANGES (F.S.) AND ALARM LEVELS AVAILABLE FOR REFRIGERANT GASES:

Gas types and ranges 0-2000ppm	Safety group	Enclosure type	Programming increase	Minimum level	Maximum level	Factory setting General alarm 1-2 General alarm
R-507	A1	IP65	50ppm	50ppm	1950ppm	300-600-1000ppm
R-134a	A1	IP65				
R-404a	A1 A1	IP65				
R-407a	A1	IP65				
R-407f	A1	IP65				
R-410a	A1	IP65				
R-449	A1	IP65				
R-417a	A1	IP65				
R-448a	A1	IP65				
R-227ea	A1	IP65				
R-1233zd	A1	IP65				
R-513a	A1	IP65				
R-422d	A1	IP65				
R-125	A1	IP65				
**SF <sub>6</sub>	-	IP65				
R-143a	A1	IP65	50ppm	50ppm	1950ppm	300-600-1000ppm
R-452a	A2L	ATEX	50ppm	50ppm	1950ppm	300-600-1000ppm
 Refrigerants: R717 (NH <sub>3</sub> ) request special software version VR717, range 0-1000ppm R744 (CO <sub>2</sub> ) configure the control panel in standard mode, range 0-2% v/v (20000ppm)						
Gas types and ranges 0-100% LFL*	Safety group	Enclosure type	Programming increase	Minimum level	Maximum level	Factory setting General alarm 1-2 General alarm
R-32	A2L	Atex	1%	1%	90%	20-40-50%
R-1234yf	A2L	Atex	1%	1%	90%	20-40-50%
R-1234ze	A2L	Atex	1%	1%	90%	20-40-50%
R452b	A2L	Atex	1%	1%	90%	20-40-50%
R454A-B y C	A2L	Atex	1%	1%	90%	20-40-50%
R290 [propane]	A2L	Atex	1%	1%	90%	20-40-50%

\*LFL= Lower flammability limit/ Límite de inflamabilidad más bajo

\*\*SF<sub>6</sub> no es un refrigerante.

 **IMPORTANT:** *The ranges (f.s.) of the detectors in 4-20mA format connected to the optional interfaces must be manually programmed in the module line, and cannot exceed the levels shown in the table above. For all other detectors, the first available range from those shown in the table above will be automatically selected.*

 *When explosive gases are programmed (EXP), the activation relays and optical indicators n°7 (pg.8) will remain activated even when the level drops below the programmed level, manual rearming being required by pressing key nr.6 (pg.8).  
If the level remains above the programmed level, the indicators cannot be manually rearmed.*

## 8. PROGRAMMING THE DETECTOR NUMBER USING SW1 (addressing).

Detector nr	1	2	3	4
01	On	On	On	On
02	Off	On	On	On
03	On	Off	On	On
04	Off	Off	On	On
05	On	On	Off	On
06	Off	On	Off	On
07	On	Off	Off	On
08	Off	Off	Off	On
09	On	On	On	Off
10	Off	On	On	Off
11	On	Off	On	Off
12	Off	Off	On	Off
13	On	On	Off	Off
14	Off	On	Off	Off
15	On	Off	Off	Off
16	Off	Off	Off	Off

### NUMBERING DETECTORS ACCORDING TO NUMBER OF GROUPS:

1 GROUP	DETECTORS 1* TO 16			
2 GROUPS	GR1 DETECTORS 1* TO 8		GR2 DETECTORS 9* TO 16	
4 GROUPS	GR1 DTR. 1* TO 4	GR2 DTR. 5* TO 8	GR3 DTR. 9* TO 12	GR4 DTR. 13* TO 16

Always start numbering each group with the detector number marked with (\*), and remember that the parameters of each group can be independent, the gas to be detected being the same or different by group.

The number of groups is related to the number of speeds or maneuver outputs that each standard requires, so for example the Portuguese standards requires that the maneuver act on double speed motors, therefore two relays per motor will be needed, so two groups per module line will have to be programmed.

## 9. RELAY ACTIVATION DEPENDING ON STANDARDS AND GROUPS PROGRAMMED.

Standard	1 GROUP	2 GROUPS	4 GROUPS	RELAYS ACTIVATED	EXPLOSIVE GASES
Spanish	X			1-3	1 Alarm Level
Spanish		X		1-3-2-4	1 Alarm Level
Spanish			X	1-2-3-4	1 Alarm Level
Portuguese	X			1-3 1st Speed 2-4 2nd Speed	2 Alarm Levels
Portuguese		X		1-2 1st Speed 3-4 2nd Speed	2 Alarm Levels

## 10. MODULE LINE BEHAVIOUR IN CASE OF POWER SUPPLY CUT.

1.- In case of a power cut happening, if a battery was not installed, the module line will disconnect. When power is restored, it will automatically connect, with all the parameters that it had programmed before the power cut.

2.- If a battery was installed, the module lines will dim the display lighting to save energy. When the battery reaches 10V, a battery fault message will show on the display, along with an acoustic signal. If the power cut persists, when the battery reaches 9V the module line will automatically disconnect, showing.

Low Battery

Module line reconnection will happen as described in the first case.

## 11. EQUIPMENT OPERATION PROTOCOLS, EMERGENCY MODES:

In these modes some possible faults in the system hardware are considered. So that the system may continue operating, at a basic level, two possible operating modes are included, independently of which failure takes place.

### MODULE LINE FAULT.

If, for example, in a control panel composed of four module lines, number 2 stopped working, the first module line will work normally and 3 and 4 as number 1, if it happens in its first connection, or with the number it had last time it worked properly. Time and date information and all dependent options would be 100% operational.

### BASE, POWER SUPPLY AND MANAGEMENT MODULE FAULT.

If this module, common to all the module lines, would stop working once the system is operating normally, two minutes after not receiving any information in the module lines these will go into emergency mode, and the time base will now be managed in the module line/s.

If, before initializing the system, the power supply and management module is not working, after 20 s, all module lines present would be numbered as module line 1, or with the last valid number they had, as the module will not initialize them, and they would go on to work in emergency mode.

In emergency mode, the management of the power supply, battery, grid, cyclic ventilations if programmed, etc..., will not be operational. In any of these cases, the following message will show up on the display, to warn about the situation,

Emergency Mode

alternating with the rest of the information on the display.

## 12. FACTORY DEFAULT CONFIGURATION FOR THE DETECTION OF CARBON MONOXIDE (CO) FOR SPANISH & PORTUGUESE STANDARDS.


Standard	On.Ventilation	Off. Ventilation	Entry delay	Exit delay	Alarm level	Nr. of Groups
Spanish	50 ppm	<50 ppm	1 min	2 min	100 ppm Instantaneous	1-2-4
Portuguese- (International)	1 <sup>st</sup> Speed 50 ppm 2 <sup>nd</sup> Speed 100 ppm	1 <sup>st</sup> Speed <50 ppm 2 <sup>nd</sup> Speed <100 ppm	1 min 1 min	2 min 2 min	200 ppm Instantaneous	2



**IMPORTANT:** *In all the menus described in this manual, where the module line carries out a scan of the loop in search of detector families, depending on the families connected to the loop, the module line will only show the Durgas-Durpark Rs485 Direx refrigerant and Eurodetectors.*


*The families of detectors Durttox-Durtex and Direx are included in the DURGAS family.*


## 13. DISPLAY INFORMATION WITH A DISCONNECTED MODULE LINE, OFF:

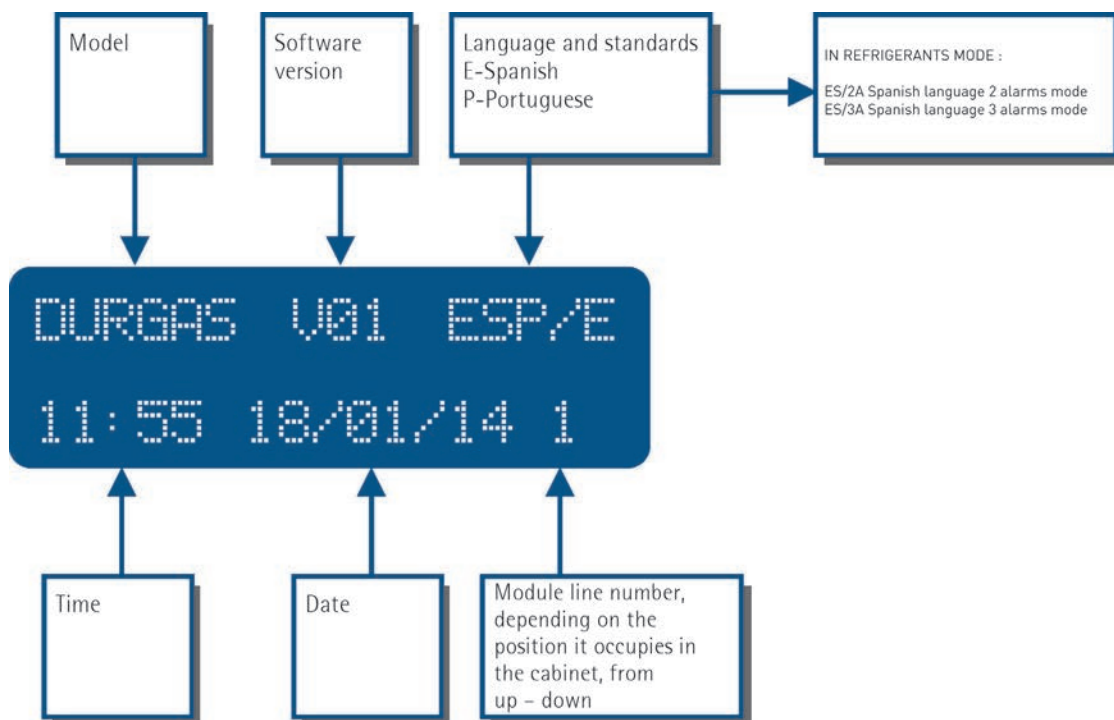


## 14. KEYPAD FUNCTIONS WITH A DISCONNECTED MODULE LINE, OFF:


### CHANGE OF LANGUAGE


Press,  and Insert Engineer code shows (6666 factory default).


Current language appears, press  and with each touch, ENG, Portuguese, Deutsch or Francaise will show

up, confirm chosen language by pressing  1



### GENERAL KEYPAD SEQUENCE, IN PROGRAMMING, ENGINEER CODE:

Press,  6 to go to the next value, or advance between menus.

Press,  4 to go back to the previous value, or move back between menus

Press,  1 to select the entry in the menu you require, and memorize parameters.

Press,  2 to increase a selection.


Press,  5 to decrease a selection and  1 to memorize selection.


## 15. SYSTEM PROGRAMMING (ENGINEER MODE, MODULE LINE OFF)

If you do not need to modify any parameters, go directly to start up, on page (nº 19). If not:

Press,  1  6666 (factory default)



Each time  is pressed the following menu will appear, with the following sequence:

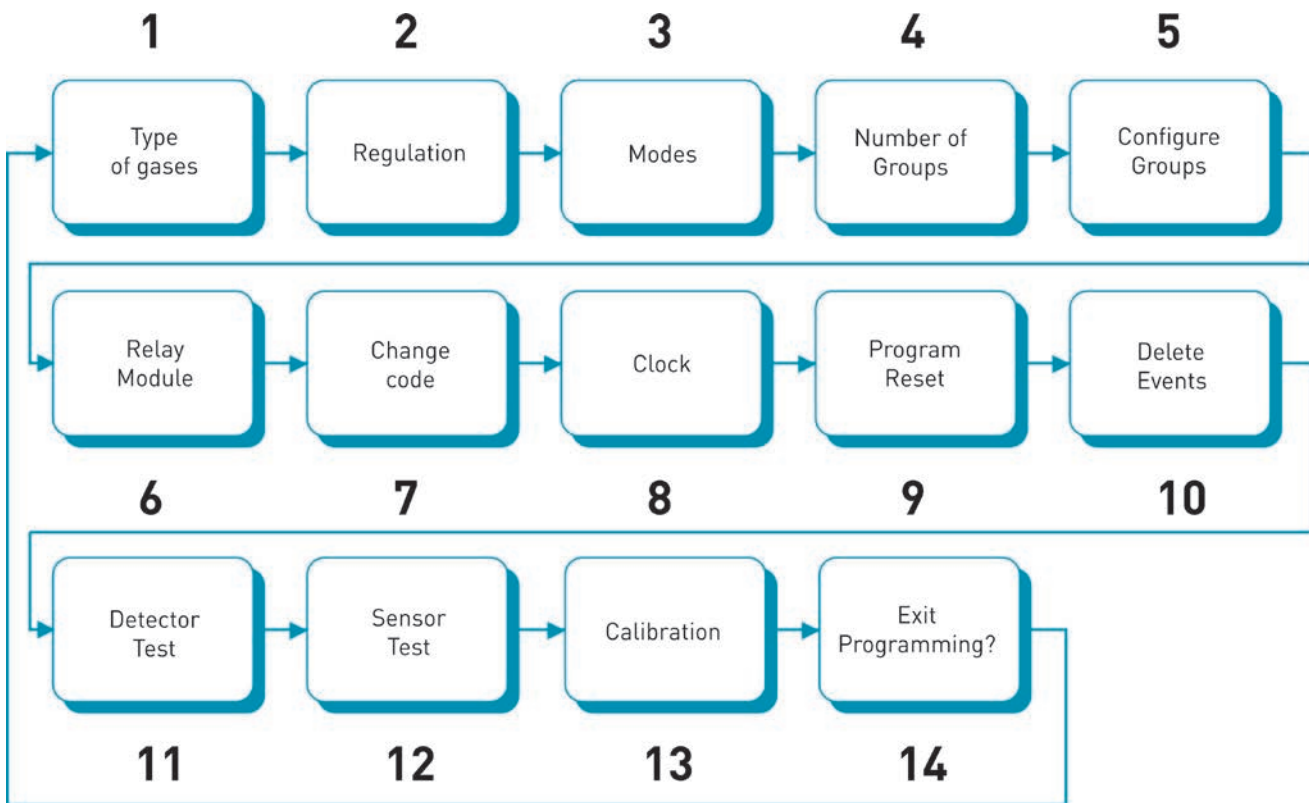


To move between the various menus, and program different options, follow the instructions shown on the display.

- 1-Gas type selection, Toxic, Explosive, or Refrigerant
- 2-Select the standard: Spanish or Portuguese. [This step will not appear if Refrigerants was selected in step 1.](#)
- 3. Select mode, 2 Alarms or 3 Alarms. [Only if Refrigerants has been selected in step 1.](#)
- 4-Select 1-2 or 4, depending on the programmed regulation only 1-2 will be displayed.
- 5-Configure the group, select the number that you want to modify, program the type of gas, the range, the ventilation level per group, (depending on regulations and/or programming) alarm level, activation delay and programming) alarm level, activation delay and deactivation delay of the ventilations.
- 6- Allows programming the association of remote relays to the desired groups.
- 7- Select a new 4-figure number for engineer access code.
- 8- Adjust parameters for clock, time, date and year, [it will only be necessary to carry out this adjustment in a single module line, the rest will synchronize automatically.](#)
- 9- Use this to return to factory default parameters. You will be asked for the engineer code.
- 10- Use this to erase all events stored in the memory.
- 11- Allows individually verifying in real time the status of each detector.
- 12- Allows carrying out a test of the status of all detector sensors without using gas.
- 13- Use to calibrate the detectors connected to the loop.
- 14- Exit programming or continue or stay in current mode.







**NOTE:** *if once inside this mode no key is pushed for 30s, the system will exit automatically to the initial OFF position. Not applicable to menus 11,12 and 13.*

## 16. PROGRAMMING ASSOCIATING RELAY MODULE (Only if installed):


Inside the engineer menu, advance up to menu 4 and press  it will show:

```
RL1 RL2 RL3 RL4
G1< G1 G1 G1
```

Press,  or  to move the < symbol to the group

you want and  or  to select an associated group 1-2-3-4, depending on


the number of groups programmed. If the remote modules are configured in mirror mode, the programming will be common to all the modules installed.

If you do not wish to associate a relay of the remote module to a group, select .



To exit this mode press  repeatedly.

By using this menu, and the remote relays operating modes described in pages 10 and 11 you may make any combination of associations between relays, groups and detectors, providing the system with great flexibility.

## 17. DETECTOR TEST.

Inside the engineer menu, advance up to menu 9 and press  the control panel will search and identify the type of detectors installed, and when finished will show:

```
Detector 01 CO
000 PPM ↑↵
```

Press,  to go to the next and  to exit this mode.

The measurement in real time of the selected detector will show up.

If it did not communicate with the module line an ERROR message will show up in the display.

## 18. SENSOR TEST, ONLY COMPATIBLE WITH DURPARK CO RS485 DETECTORS.



*Test designed for sporadic use. Continuous use could damage the sensor.*




It allows to test the sensitivity status of the sensors, of all the detectors connected in the zone, without using gas.

From the engineer menu, advance up to menu 10 and press



the following screens will show.

1

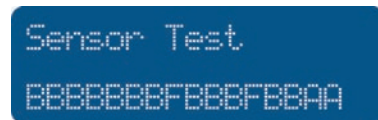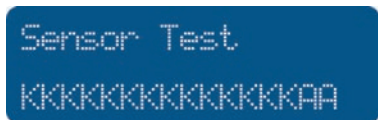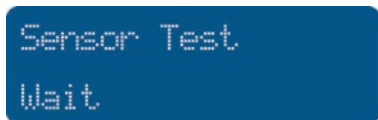

When finished, E will appear in the position belonging to the assigned detector number if everything is correct.

F will appear in the position belonging to the assigned detector number if there is a fail.

A will appear in the position belonging to the assigned detector number if it is not connected "absent"

? shows in the position belonging to an NO2 detector.




*In the example in the image above, the sensors of detectors of the detectors 1-2-3-4-5-6-7 are working correctly, number 8 gives a fail signal, numbers 9-10-11 work correctly, number 12 gives a fail, numbers 13-14 work correctly and 15-16 are not installed (Absent). The letter K identifies DURPARK RS485 detectors.*

The led codes during this test are:



Alternating fast, green and red during verification time.

When the test finishes, to locate the detectors in the installation look for fixed green,  indicating that the sensor is in correct state. On NO<sub>2</sub> detectors the led will remain turned off.



A salvo of 3 red blinks, with a cadence of 2s, indicated that the CO sensor is at the end of its useful life or in bad state. Substitute it as soon as possible for a new one.



*If you enter sensor test, and no CO DURPARK RS485 detector is found, the following message will show on the display and exit automatically from the menu*



## 19. MODULE LINE START UP:

Press,



3

shows.



4444 (factory set).

If the code is correct, the following sequence will start in the display.



25s countdown, after which shows up:

```
Relay Module
Mirror Mode Zone
```

```
Relay Module
Group 1-2-3-4
```

Remote relay modules, mirror mode (associated to the module line), or associated to groups, if any are detected, if not these messages will not show up.

```
Detector 10 4-20mA
Interface 1 (A)
```

```
Eurodetector
(EEEE o CO62P) (B)
```

```
Detector 1 CL2
Detector 5 SO2
```

Number and type of detector, gas, type of communication and interface number, 1 or 2, if an interface is detected, if not these messages will not show up.

A: with interfaces manufactured up to date and B: with new model, DURGAS, interfaces.

```
Detector DurPark
KKKKKKKKKKKKKKKKKK
```

Detectors found according to model, represented in the following way:

**D** DURGAS detectors.

**E** EURODETECTORS.

**R** REFRIGERANTS.

**K** DURPARK RS485 detectors.

**-** Not installed or not found.

**S** STANDGAS LCD RS485

**i** IMPORTANT: *DURPARK RS485 detectors and EUROSONDELCO OR DURGAS cannot be mixed in the same loop. The DURGAS family is composed of: DURTEX-DURTOX and DIREX.*

```
Total 16
KKKKKKKKKKKKKKKK
```

Quantity of detectors found.

```
Detector 01 CO
```

The addressing number assigned to each detector, from 01 to 16 and the type of gas, CO-NO<sub>2</sub>-EXP etc.

Total Groups 04

In Use 1 2 3 4

Number of groups that have been detected or programmed, and quantity of active groups, from 1 to 4.


Battery OK

or No Battery

if it is not connected.


If an error was detected, because the programming does not coincide with what has been installed, or because of some error in wiring, **ERROR** will show. The module line will disconnect and the fault led will light up. Check programming, loop cabling and try again.

## 20. DISPLAY INFORMATION WITH A CONNECTED MODULE LINE.

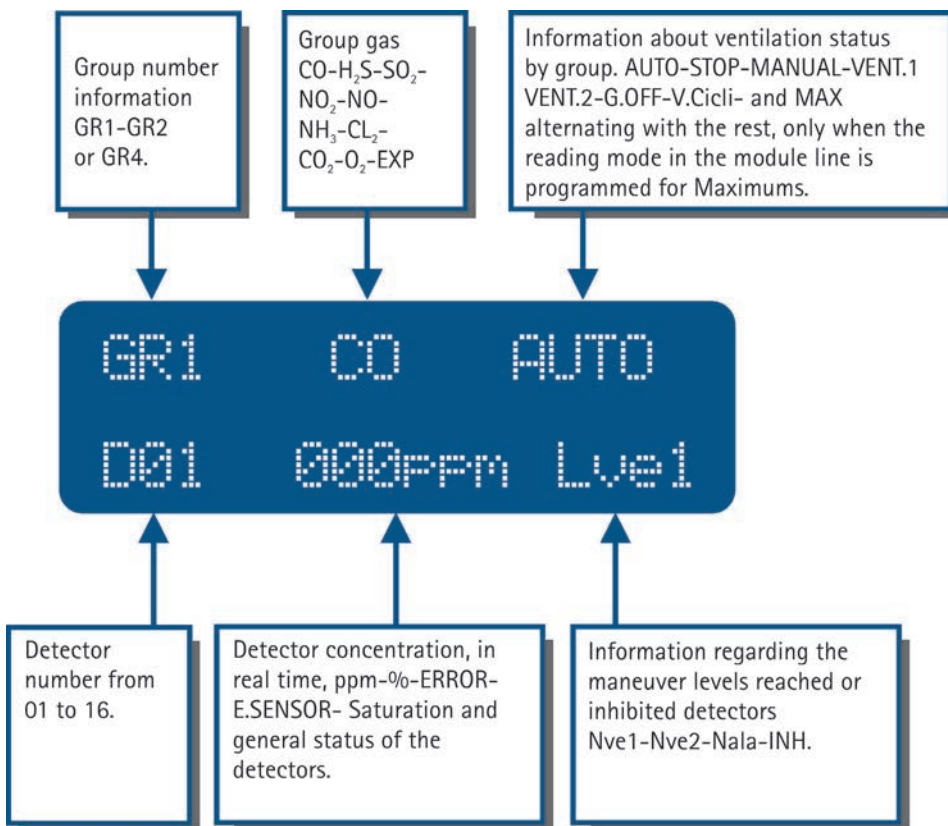

Nve1=Ventilation level 1 / Nve2=Ventilation Level 2 / Nala=Alarm Level and INH= Detector Inhibited.

## 21. DISPLAY INFORMATION WITH THE ZONE CONNECTED REFRIGERANT GASES.

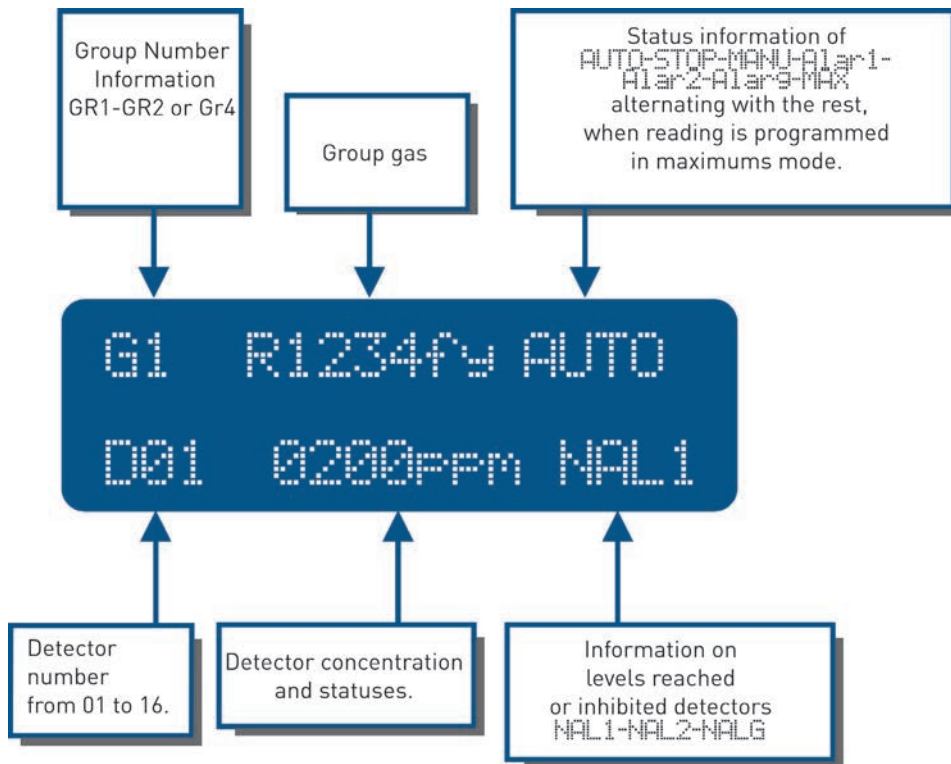

Alarm1 and Alarm2= Identification of alarm statuses AlarmG= General Alarm.  
 NAL1-NAL2= Programmed alarm levels reached.  
 NALG= Programmed general alarm level reached.

## 22. LED CODES IN THE DETECTORS (Eurodetectors).

### Rapid blinking:

Initializing, the detector still has not been recognized by the module line at the time of connection. Another possible cause could be a communication error.



### Sequential lighting up while detector is at rest:

Detector functioning correctly.



### Fixed lighted up:



Only in CO detectors, indicates that CO concentration detected is at or above 50ppm.

## 23. LED CODES IN DURPARK RS485 DETECTORS.

Alternate lighting up green red:



Initializing, the detector still has not been recognized by the module line at the time of connection. Also indicates communication error, if the detector has not communicated with the module line for more than 2 min, once it has been recognized

Red, fixed lighted up:



*In CO detectors, it indicates that the detected concentration is at or above 50ppm. In NO<sub>2</sub> detectors it indicates that the detected concentration is at or above 3ppm. This indication is independent from the level programmed in the module line.*

Red, slow intermittent:



Uncalibrated detector, incorrectly calibrated or detector error.


Green sequential blinking, each time it communicates with module line:





Correct functioning.



## 24. KEYPAD FUNCTIONS WITH THE MODULE LINE CONNECTED.



Every time the keypad is handled after the symbol of led  has turned off, the user code 4444 (factory default) must be inserted again.


If,  is pressed user programming is entered.  
1


If,  is pressed it changes type of ventilation for each group, first select the group you wish to  
2

change (only if there is more than one), up  or  down.


Once selected confirm with  followed by  or with  selecting the type


of ventilation you want: Automatic activates automatically when the programmed levels are


reached, Manual is always activated, Stop is always off. Confirm change with 

If,  is pressed it activates or inhibits the internal acoustics in the module line.


When a common acoustic signal, such as grid fault, battery fault or earth fault, is set off, it will be enough to inhibit acoustics in a single module line to inhibit the others.

if,  is pressed, it will show the model, software version, date, time and module line number.

If, after this,  is pressed, it will show, each time it is pressed, how the module line is configured.


When explosive gases are programmed (EXP), press  to manually rearm a previous state of

prealarm or alarm, led 7 turned on. Rearming will only happen if at the moment the key is pressed the level detected by the module line is lower than the programmed level.


If,  is pressed, the module line will disconnect.

## 25. INHIBIT DETECTORS FUNCTION.

Allows inhibiting detectors that are causing problems due to breakdown or decalibration.

Enter user menu pg. 31, point 35, advance up to menu 6 and press,  the display will



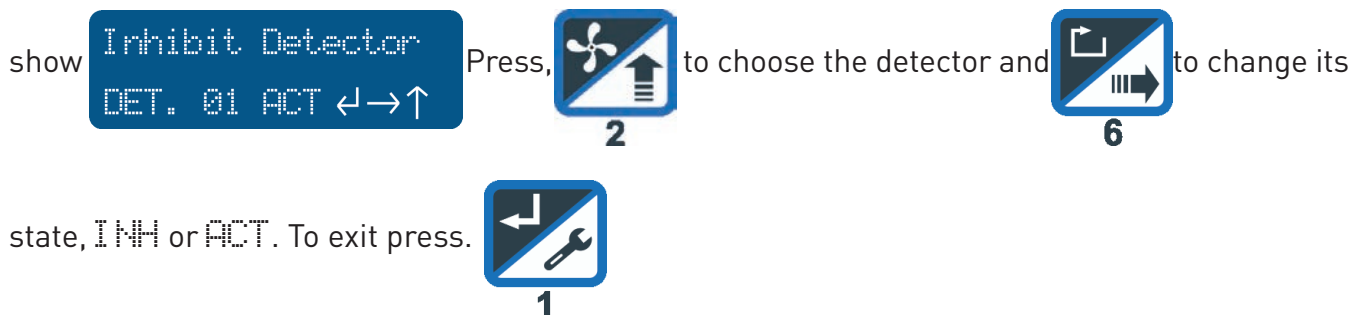

## 26. SENSOR CHANGE (EURODETECTORS).

When the sensor reaches the end of its useful life, cannot be calibrated, does not respond, or shows signs of instability, it will be necessary to substitute it. To do so, follow these steps:

1. Disconnect the module line unit to which the detector is connected.
2. Unscrew the 4 screws on the cover of the detector.
3. Disconnect the CN1 connector that connects the sensor and the circuit.
4. Remove the sensor, unscrewing it from its box.
5. Insert the new sensor in the detector.
6. Remove the bridge that there is in the sensor connector.
7. Insert connector in CN1.
8. Proceed to adjust the zero and calibrate with gas as described below.

## 27. DETECTOR CALIBRATION (EURODETECTORS).


All detectors manufactured by DURAN ELECTRÓNICA have been calibrated using pattern gas in our laboratories and, therefore, do not need to be calibrated during the initial startup of the installation.

Remember that detectors should be checked, at least, once a year.

Before proceeding with calibration, make sure that detectors have been connected at least for 1 hour. For the ZERO references to stabilize, make sure that the gas sensor heads of all detectors, except O<sub>2</sub> detectors, have had their covers on for at least 30 minute. You may also use Nitrogen (N<sub>2</sub>) to adjust ZERO.

### PATTERN GAS, AND RECOMMENDED CALIBRATION FLOW FOR EACH GAS:

Type of detector	Pattern gas in ppm	Gas flow ml/min
CO	150	150
H <sub>2</sub> S	20	400
SO <sub>2</sub>	20	400
NO	20	400
NO <sub>2</sub>	10	400
HCL	20	1.000
CL <sub>2</sub>	5	1.000
HCN	10	1.000
NH <sub>3</sub>	20	250
O <sub>2</sub>	O2 at 25% or ambient air	250
CO <sub>2</sub>	1.000	500
EXP	2.5% Vol. = 50% L.E.L	150

 Due to the large number of gases and ranges these data could be different.

## 28. ZERO ADJUSTMENT (2 modes).

---



*Not applicable to other gases, nor to detectors connected to 4-20mA interfaces.*

**MODE 1:** Using the display in the Module line unit.

Verify gas concentration in the display. If it is other than "000" slowly adjust the ZERO potentiometer up to the moment this value shows up on the display.

**MODE 2:** Without the display, and with a measuring instrument.

Position the instrument in the scale of 2V DC. Connect the negative to the GND point and the positive to the TP+ point of the detector. Turn the ZERO potentiometer slowly to the left or right until an appropriate tension reading is obtained (see calibration tables page 23).

### CALIBRATION WITH GAS (2 modes).



*Due to the importance and sensitivity of this point, all work must be carried out by qualified personnel, with the knowledge and tools necessary to guarantee the correct later functioning of the detector.*

**MODE 1,** Using the module line display and without a measuring instrument.

Take cover off the detector and insert optional adapter.

Apply gas with the concentration and flow indicated in the calibration table, and wait for the reading to be stable.

Adjust the GAIN or CAL potentiometer in the detector until the concentration equivalent to that of the pattern gas used is reached (for example in the case of CO=150ppm).

**MODE 2,** without looking at the module line display and with measuring instrument.

Position the instrument in the 5V DC scale, connect the negative of same to the GND point and the positive to the TP+ point.

Adjust the GAIN or CAL potentiometer in the detector until a reading in mV appropriate to the gas concentration being used is obtained, following the calibration tables in page 23.

## 29. CALIBRATION TABLES (See data for EXP detectors in their manuals).

O<sub>2</sub> DETECTORS, RS485

Level (%)	Tension (V dc)
0	0
5	0.8
10	1.6
15	2.38
20	3.18
25	4

CO EURODETECTORS, RS485

Level (ppm)	Tension (V dc)
0	0.1
50	0.6
100	1.1
150	1.6
200	2.1
250	2.6
300	3.1
350	3.6

## 30. CALIBRATION DATA, SONDELTOX DETECTORS 4-20mA:

If measuring in mA =  $16X$  (applied gas concentration)  $\div$  range of detector in ppm +4.


If measuring in mV =  $(16X$  (applied gas concentration)  $\div$  range of detector in ppm +4) X10.

**Example:** NO<sub>2</sub> detector, measuring range 0-20ppm, 10ppm calibration gas used.

In mA,  $16X10 \div 20 + 4 = 12\text{mA}$ .- (in this case the zero will be 4 mA).

In mV,  $(16X10 \div 20 + 4) X 10 = 120\text{mV}$ .- (in this case the zero will be 40 mV).

### 31. POSITIONING OF THE ADJUSTMENT POTENTIOMETERS:

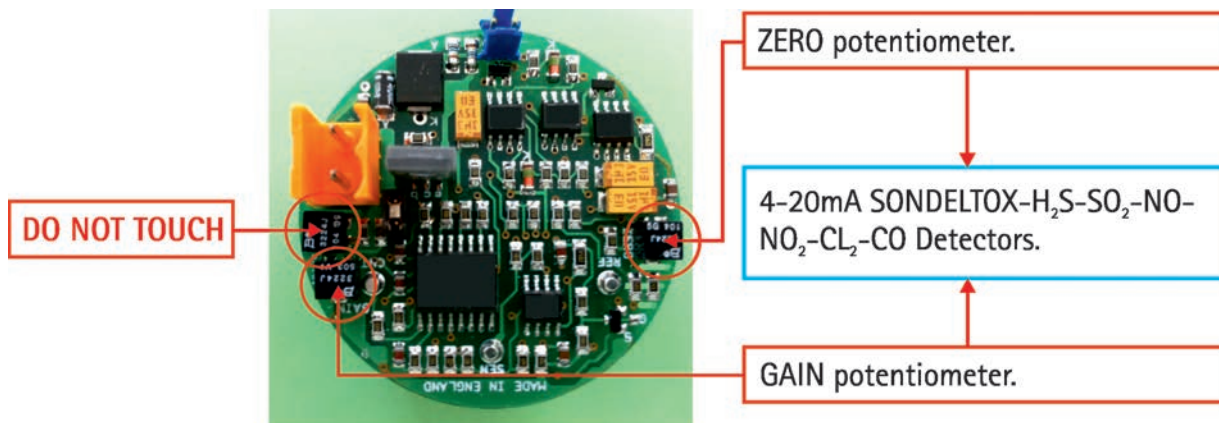


Detectors – SONDELTOX 4-20mA.



In the DURTOX and DIREX detectors, the adjustments are carried out by a special software and hardware, and it is therefore necessary to return them to the factory.

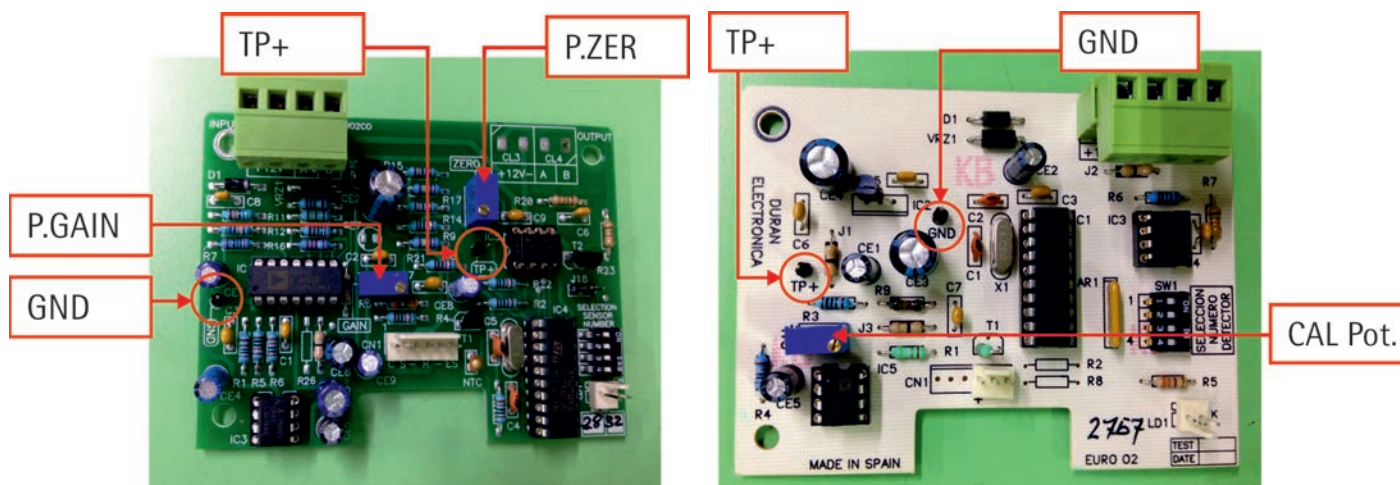

### 32. MEASURING POINTS and adjustment potentiometers, CO, NO<sub>2</sub> and O<sub>2</sub> Eurodetectors




Eurodetectors- CO,NO<sub>2</sub> detectors

Eurodetectors –detectors -O<sub>2</sub>


### 33. ENTERING CALIBRATION MODE (PUT MODULE LINE IN OFF):

Press,  and type in the engineer code, 6666,  move on to the calibration menu

(13), and press  A sequence will commence, searching for the type of detectors installed.


First it will search for **DURGAS** or **DURPARK RS485** series detectors, and then for **EURODETECTORS**, depending on the detectors found the system will proceed, in accordance with the following procedures:




### 34. CALIBRATION PROCEDURE FOR CO AND NO<sub>2</sub> DURPARK RS485 DETECTORS.


 *This operation should only be carried out by personnel with adequate formation. They must be equipped with adequate means and tools, and a test bottle with a gas concentration of 150ppm, precise mixture of CO and synthetic air, for CO calibration, or a 10ppm test bottle, precise mixture of NO<sub>2</sub> and N<sub>2</sub>, for NO<sub>2</sub>.*


*If this adjustment is to be carried out in environments where the presence of gas is suspected, it will be necessary to have a test bottle of N<sub>2</sub> (Nitrogen) available for a correct Zero adjustment.*


*Concentrations of 100-150\* and 200 may also be chosen for CO, and 5-10\* and 15 for NO<sub>2</sub>.*

From the engineer menu (module lines disconnected) advance until menu 13, press  once inside.

 press,  to choose the detector you want, or  to carry out calibration.

 The date of calibration, date-month and year are automatically memorized in each detector following the module line programming, to be checked in factory. Make sure that the date and time in the module line are correct.

 First the Zero adjustment is shown. Wait for at least two minutes and,



when the measure is stable, press, 

*\* Chosen concentrations for this description.*




If the level shown in the display is higher than 20 ppm of CO or 2 ppm of NO<sub>2</sub>, will show **ERROR** and it will not be possible to proceed with the adjustment, but the Zero data from the last calibration will be maintained. If the level is correct, it will be memorized and the gain calibration option will show up.




Press,  **2** to adjust the Zero of the next detector or  **1**


to adjust gain.


If you do not wish to adjust gain press

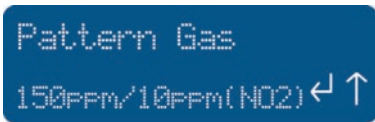

Press,  **2** to select the concentration of the test bottle


and  **1** to start calibration.

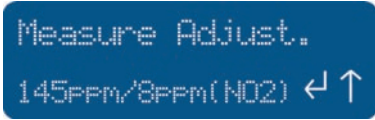



Wait until the chosen concentration is reached and wait at least four minutes. When the measure is stable, press,  **1** and the following will show.

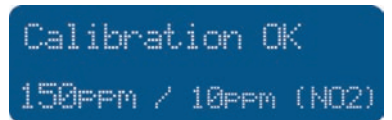

At the end if everything is ok it will appear.



Press,  **2** To advance to the following detector and repeat the steps for each detector

Press,  **3** to exit the calibration menu, from any position.



If the level reached is not within  $\pm 20\%$ \* of the expected response, **ERROR** will appear and it will not be possible to carry out the adjustment, as the response obtained from the sensor could be compensated with the appropriate gain factor, but the information from the last calibration will be maintained.

Verify that the concentration selected corresponds to that of the bottle and repeat the process. If the error persists, the sensor must be substituted.


\*Maximum electronically compensatable level

## CALIBRATION PROCEDURE WITH GAS MODE 1, EURODETECTORS.


Follow the same procedure as in the previous case (point 34 page 29) until the following message appears

Cal. gain?  
Press ↑ ←

The display will show the concentration, once the zero and gain have been manually calibrated

Press,  once the detector has been manually calibrated, then  
**6**


go on to the next one.

Press,  when you wish to exit this mode.  
**3**



*NOTE: in this mode, the alarm and ventilation outputs will not be operative.*



## 35. MODULE LINE PROGRAMMING OPTIONS, ON MODE.

Every time that the keypad is used after the led ,  turns off, the user code 4444 (factory default) must be inserted.


USER PROGRAMMING:

Press,  **1** 

4444 (factory default) 

Press,  **1** to enter the menu you wish, or press,  **6** to go to the next one.

The different menus will show up, following the sequence below.

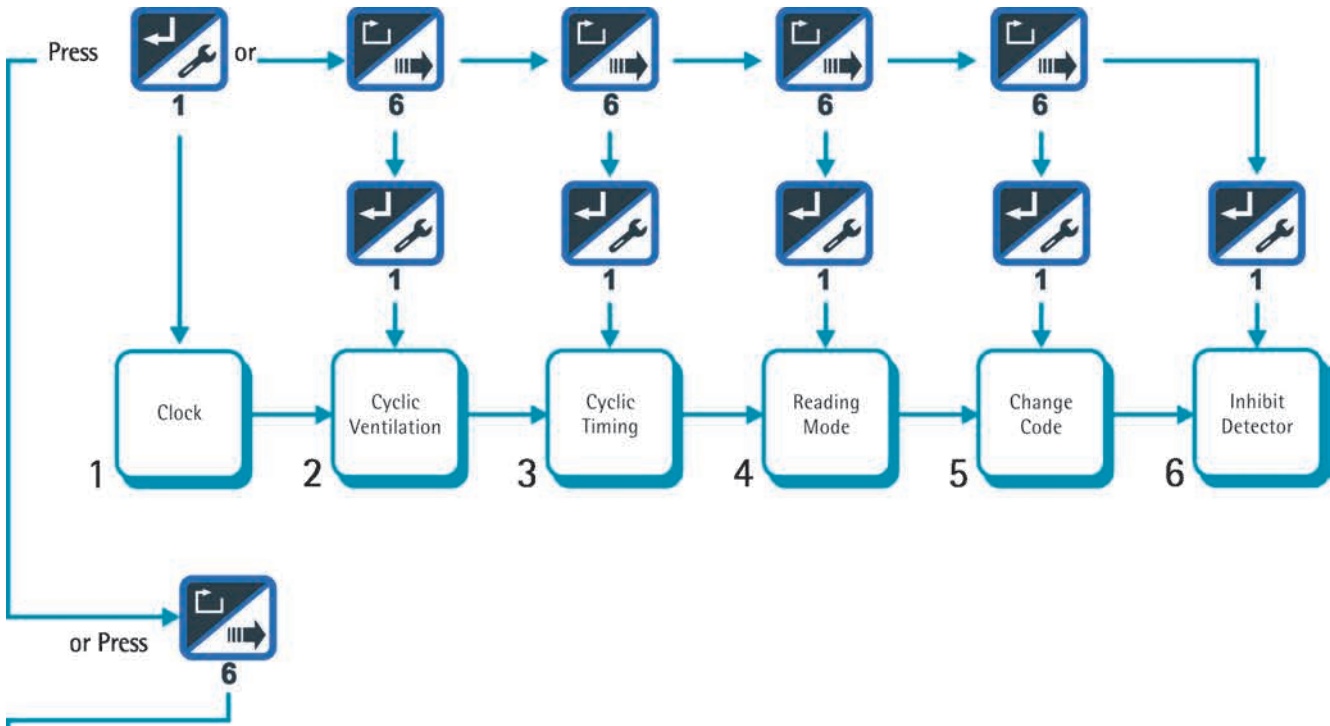




1-Adjust the clock, time, date and year parameters. It will only be necessary to carry out this adjustment in a single module line. The rest will synchronize automatically.  
 2-Use it to program a ventilation actuation, without a previous gas concentration. Programming is independent by group. First select the number of the group you wish to program, and confirm with ENTER. Select the activation interval with the UP or DOWN key and confirm with ENTER.  
 3-Use this to select the activation time of the cyclic ventilation. Select with the UP or DOWN keys and confirm with ENTER.  
 4-Use it to program the reading of all the detectors in sequential mode, 01-02-03...16, or maximums reading mode. In this mode the display only shows the first detector in each group, or the one reading out the most concentration. Select with the UP or DOWN key and confirm with ENTER.  
 5-Use this to change the user code. Type in the new code.  
 6-Use this to inhibit detectors which are defective, in observation or pending maintenance. The detectors selected will show up in the display as INH and will perform maneuvers or cause faults or acoustics



7-Event memory menu.  
 8-Chronologically visualize the last 25 events stored in the module line, with date and time.  
 9-Allows visualizing the stored highest gas concentration by group, with date and time.  
 10-Allows erasing the maximum concentrations stores for each gas.  
 11-Allows carrying out a test of the module line status.  
**The event memory is automatically updated when it reaches its maximum capacity, erasing the first event that was memorized.**



If when in menu 10,  is pressed, it will exit this mode and the display will show the previous status information of the module line.

If when in menu 7,  is pressed, it will go to menu 11. Press,  to start a system test

following the below sequence:

Module line internal acoustics activate.

All module line leds activate sequentially.

Sequential activation of the 4 ventilation module line relays, and remote relays if installed, following the standard and association programmed.

Module line alarm relay activates, and associated remote relays if installed.




Aux. Volt. 14.5V, tests tension (varies depending on the charge).

P. Line 14.0V, tests loop supply tension (varies depending on the charge).

Battery OK., tests battery status if previously installed. If not installed, Sin Bateria.

 *When test is finished the display will automatically show the previous information of the module line status.*

**EXAMPLE, VISUALIZING THE EVENT MEMORY:**

 Press,  or  to move through the event numbers,

event number will be shown briefly, Event XX.). In this example it is shown that there was an alarm level caused by detector 4, belonging to group 1, at 11:50 hours on 11/02/14.

## TYPES OF EVENTS, (last 25 in each module line).

Module line ON

Module line OFF

Engineer programming entered.

User programming entered

Events erased

Grid fault

Grid reinstated

Battery fault

Earth fault

Passing to ventilation to manual. In Refrigerants mode switch handling to manual.

Passing to ventilation to stop. In Refrigerants switch handling to Stop.

Passing to ventilation to automatic. In Refrigerants switch handling to automatic.

Activation Ventilation 1. In Refrigerants activation of alarm 1.

Activation Ventilation 2. In Refrigerants activation of alarm 2.

Vent. Level 1. In Refrigerants alarm level 1.

Vent. Level 2. In Refrigerants alarm level 2.

Alarm Level. In Refrigerants general alarm level.

Saturation Level (the detector reached the maximum level of its full scale, f.s)

Sensor Error (sensor disconnected, and also when a detector connected to an optional 4-20mA interface is short-circuited, or taken off)

Line Fault

Aux. Fault (auxiliary tension output)

## 36. MODULE LINE TECHNICAL CHARACTERISTICS:

Technology.	24 bits microprocessor
Power supply tension.	From 9 V to 15V DC
Maximum consumption, approx.	150mA
Maximum loop length.	Up to 1Km, 4 wire shielded hose 2 x 1,5(*) mm <sup>2</sup> for power supply and 2 x 0.25 mm <sup>2</sup> twisted pair for communications.
Maximum reading capacity per module line.	Up to 16 detectors
Programmable reading modes.	Sequential or maximums
Data presentation per module line.	Backlit LCD display 16 x 2 lines of alphanumeric characters.
Reading speed.	4s per detector –sequential mode- and 4s in total in maximums reading mode.
Outputs.	4 independent outputs per module line 3A 250V AC dry contact fuse protected. 1 general alarm 12V-300mA switched, 1 auxiliary 12V-300mA , both protected by automatic reset fuse, 1 for loop power supply 12V 3A protected with automatic reset fuse and 1 for battery 12V DC 7,5Ah, fuse protected.
General fault output.	1 – voltage free C, NC, on standby.
Switched Power source.	13,8V 5A. Durgas 1 to 4 module lines / 13.8V 2,4A Mini Durgas control panel 1 module line
Mains input.	120-240V AC, 47-63Hz.
Approximate control panel consumption.	30W DURGAS 4 module lines-10W mini Durgas 1 module line.
Cabinet dimensions, in mm.	1-4 module line control panel 390x288x140 Mini Durgas 1 module line 280 x 210 x 85
Weight –Kg- and protection grade.	5.3 control panel 1-4 module lines (150gr. per additional module line), 2.7 in mini DURGAS version 1 module line- IP40.



(\*) Minimum required for toxic gases.

*The cross section of the power supply cables and maximum distances vary depending on the quality of the cable used, the distribution of the detectors throughout the total cable length, total charge, or the power supply tension range, when 4-20mA format detectors are installed.*

*On mixed installations, or those with explosive gas detectors, it is advisable to increase the cable cross section to 2.5mm<sup>2</sup>, and even plan to install auxiliary power supply units throughout the loop.*

## 37. TECHNICAL CHARACTERISTICS Eurosondelco CO/NO<sub>2</sub>, RS485-IP665 detectors

Technology.	Microprocessor and electrochemical sensor with filter for SO <sub>x</sub> / NO <sub>x</sub> / H <sub>2</sub> S detector CO – NO <sub>2</sub> without filter.
Power supply tension.	From 9V to 15V DC.
Consumption.	8mA (standby) 15mA (alarm).
Measuring range.	From 0 to 400 ppm CO and 0 to 20 ppm NO <sub>2</sub> .
Resolution.	±1ppm.
Reproductivity.	0,5% full scale.
Linearity.	Linear throughout the scale.
Calibration gas.	Precise mixture 150 ppm CO + N <sub>2</sub> 150 ml/min for CO and 10 ppm NO <sub>2</sub> +N <sub>2</sub> 400ml/m NO <sub>2</sub> .
Sensor useful lifetime.	>4 years CO and >2 years NO <sub>2</sub> . In normal working conditions
Recalibration Periods.	Every 2 years CO/ Once a year NO <sub>2</sub> .
Relative humidity.	From 15% to 90% (continuous) or from 0% to 99% (intermittently).
Atmospheric pressure.	±10%.
Working temperature.	From -15°C to +50°C.
Response time.	T90 < 30 s.
Cable entry.	Through PG9 cable gland self-locking.
Communication.	4 wire, RS485 proprietary protocol, addressable (1 to 16).
Protection grade.	IP65.
Material.	Makrolon & ABS.
Weight (gr) and Dimensions (mm).	325 / 120 x 150 x 63.
Installation height.	1,8 / 2 m from floor CO and 1m from floor NO <sub>2</sub> .
Approximate coverage.	200m <sup>2</sup> (CO following Spanish regulations) and 100m <sup>2</sup> NO <sub>2</sub> .

*Conditions, 20% O<sub>2</sub>, 20 ±2°C and 40 ± 10% RH (% minimum of O<sub>2</sub>, 10%)*

*\*Installation height and coverage, apply the local regulations in force in each case.*

*Conditions, 20% O<sub>2</sub>, 20 ±2°C and 40 ± 10% RH (% minimum of O<sub>2</sub>, 10%)*

### 38. TECHNICAL CHARACTERISTICS CO and NO<sub>2</sub> DURPARK RS485-IP20 DETECTOR.

Technology.	Microprocessor and electrochemical sensor.
Power supply tension.	From 9V to 15V DC.
Consumption.	14mA (standby) 24mA (led turned on).
Measuring range.	From 0 to 300ppm CO and 0-20ppm NO <sub>2</sub> .
Resolution.	±1 ppm CO ± 0.5 ppm NO <sub>2</sub> .
Reproductivity.	±1% and 3% Full scale respectively.
Linearity.	Linear throughout the full scale.
Calibration gas.	Precise mixture 150 ppm CO + N <sub>2</sub> 150 ml/min. Precise mixture 10 ppm NO <sub>2</sub> + N <sub>2</sub> 400 ml/min.
Sensor useful life.	>5 years CO and 3 NO <sub>2</sub> . In normal working conditions.
Calibration periods	Calibration throughout useful life
Relative humidity.	From 15% to 90% (continuous) and from 0% to 99% (intermittent).
Atmospheric pressure .	±10%.
Working temperature.	From -15°C to +50°C.
Response time T90.	< 120 s CO and <30 s NO <sub>2</sub> .
Communication.	4 wire, RS485 proprietary protocol, addressable (1 to 16).
Protection grade.	IP20.
Materials.	ABS.
Weight (gr) and Dimensions diameter/ height (mm).	146, 84,90 X 42 without base – 90 X 74 with base.
Installation height.	1.8 / 2 m from floor CO and 40/50cm from floor NO <sub>2</sub> .
Approximate coverage.	200 m <sup>2</sup> CO 200m <sup>2</sup> (CO following Spanish regulations) 100m <sup>2</sup> NO <sub>2</sub> . (Recommended)


*Conditions, 20% O<sub>2</sub>, 20 ±2°C and 40 ± 10% RH (% minimum of O<sub>2</sub>, 10%)*

*\*Installation height and coverage, apply the local regulations in force in each case.*


### 39. REMOTE MODULE CHARACTERISTICS.

Power.	10 to 15V DC.
Consumption.	24mA at rest. 157mA All active relays.
Communication.	RS485 4 wires + - A & B.
Outputs.	5 switchable dry contact outputs 3A 250V AC max. (non-capacitive load)
Optical indicators.	With 5 red leds, active relays indicators And 1 green led, communication state indicator
Assembly.	Track DIN.


# 40. EURODETECTORS RS485 IP65 GENERAL CONNECTIONS

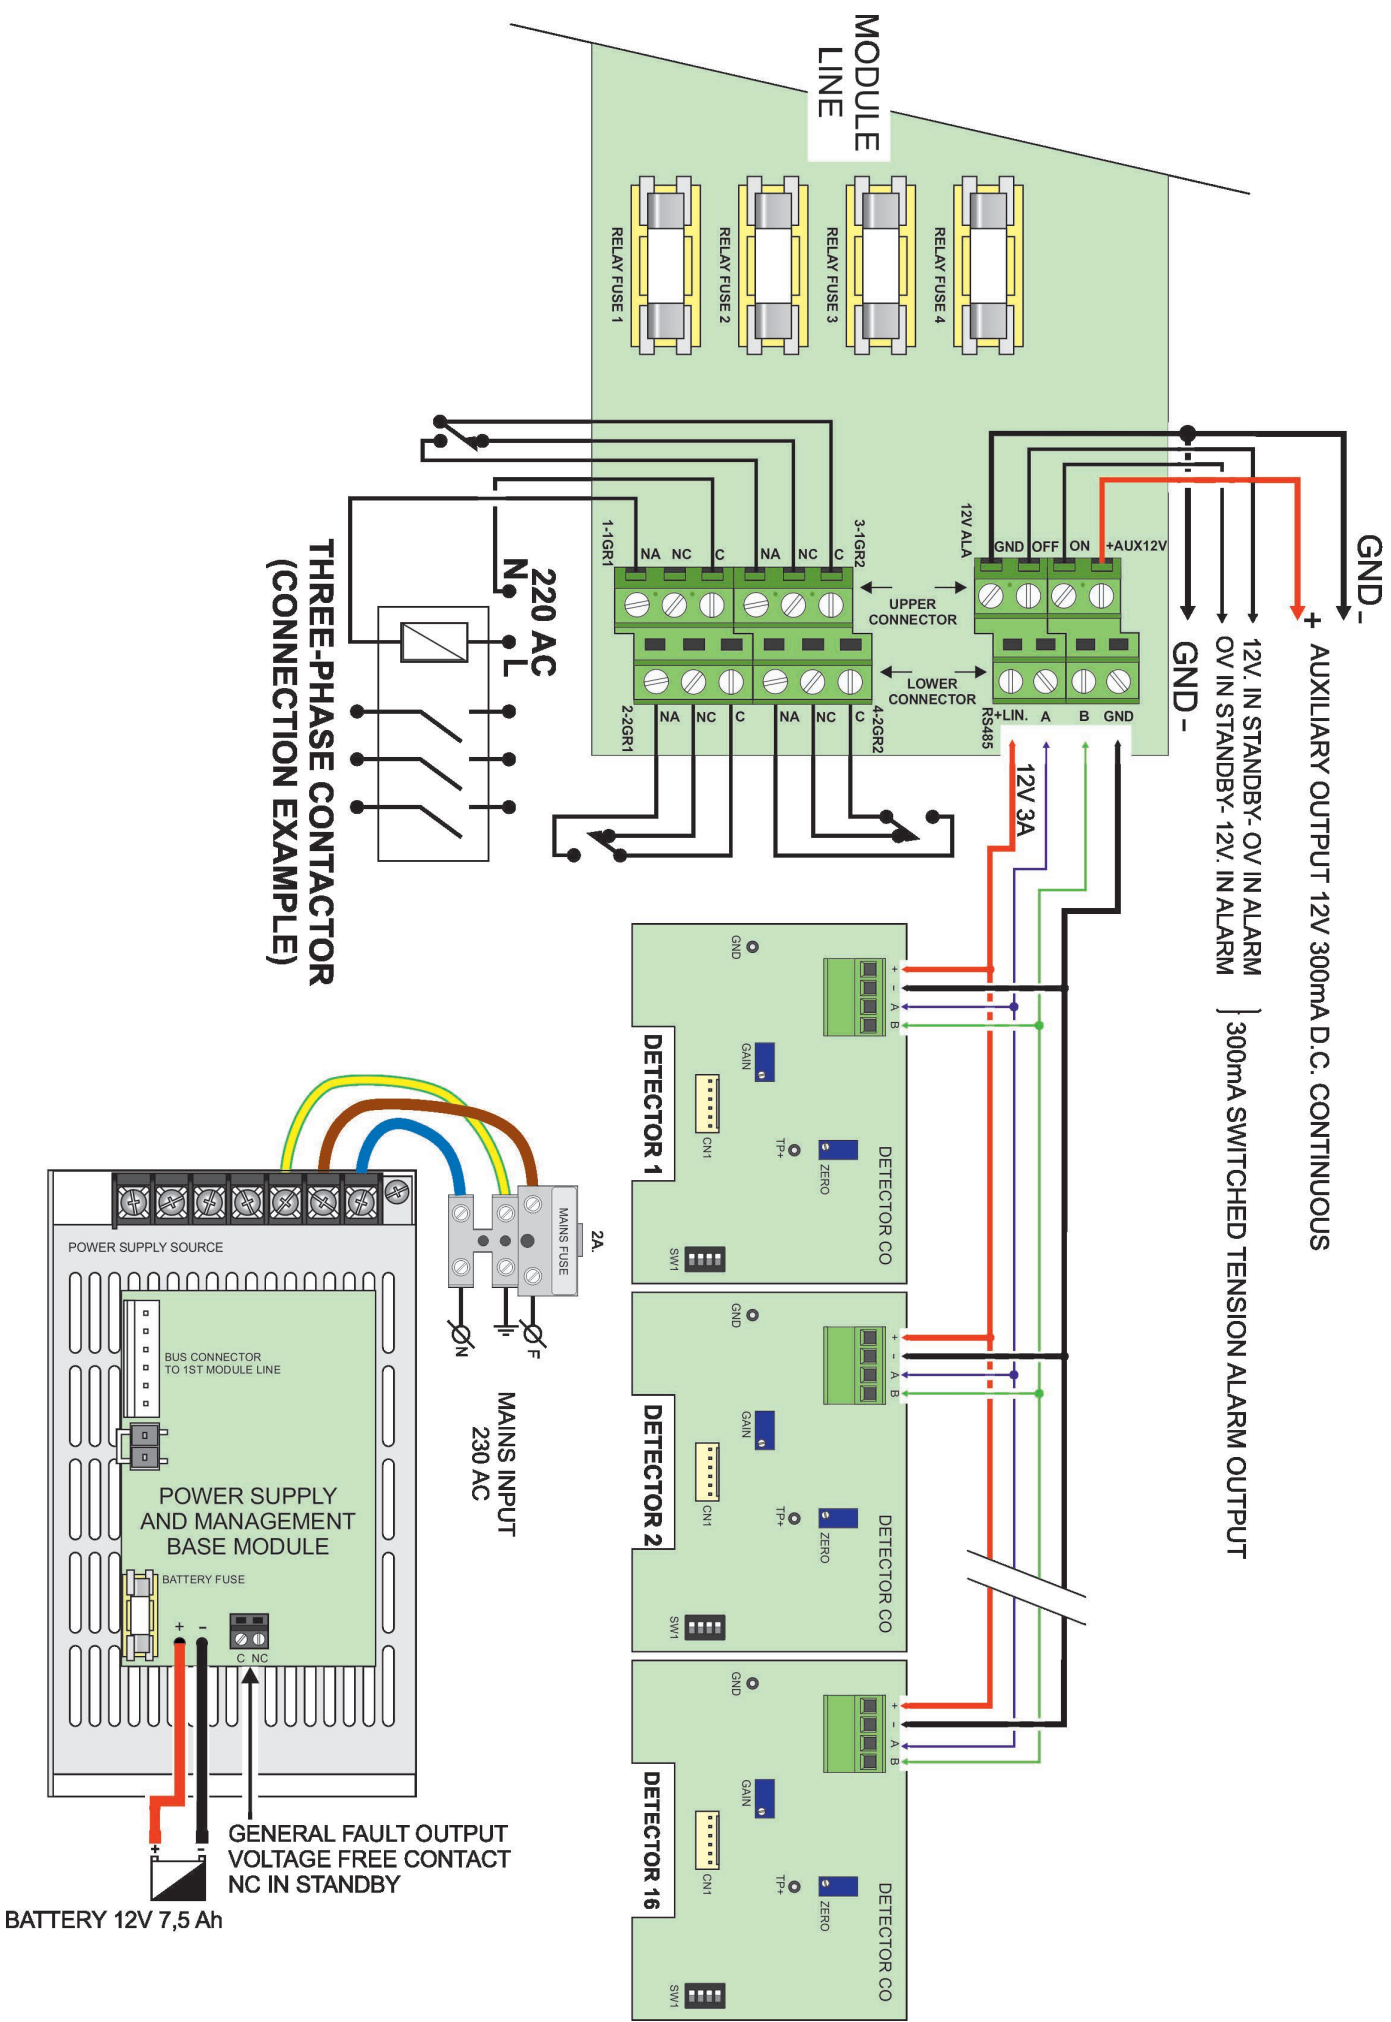

# 4.1. DURPARK RS485 DETECTORS CONNECTIONS

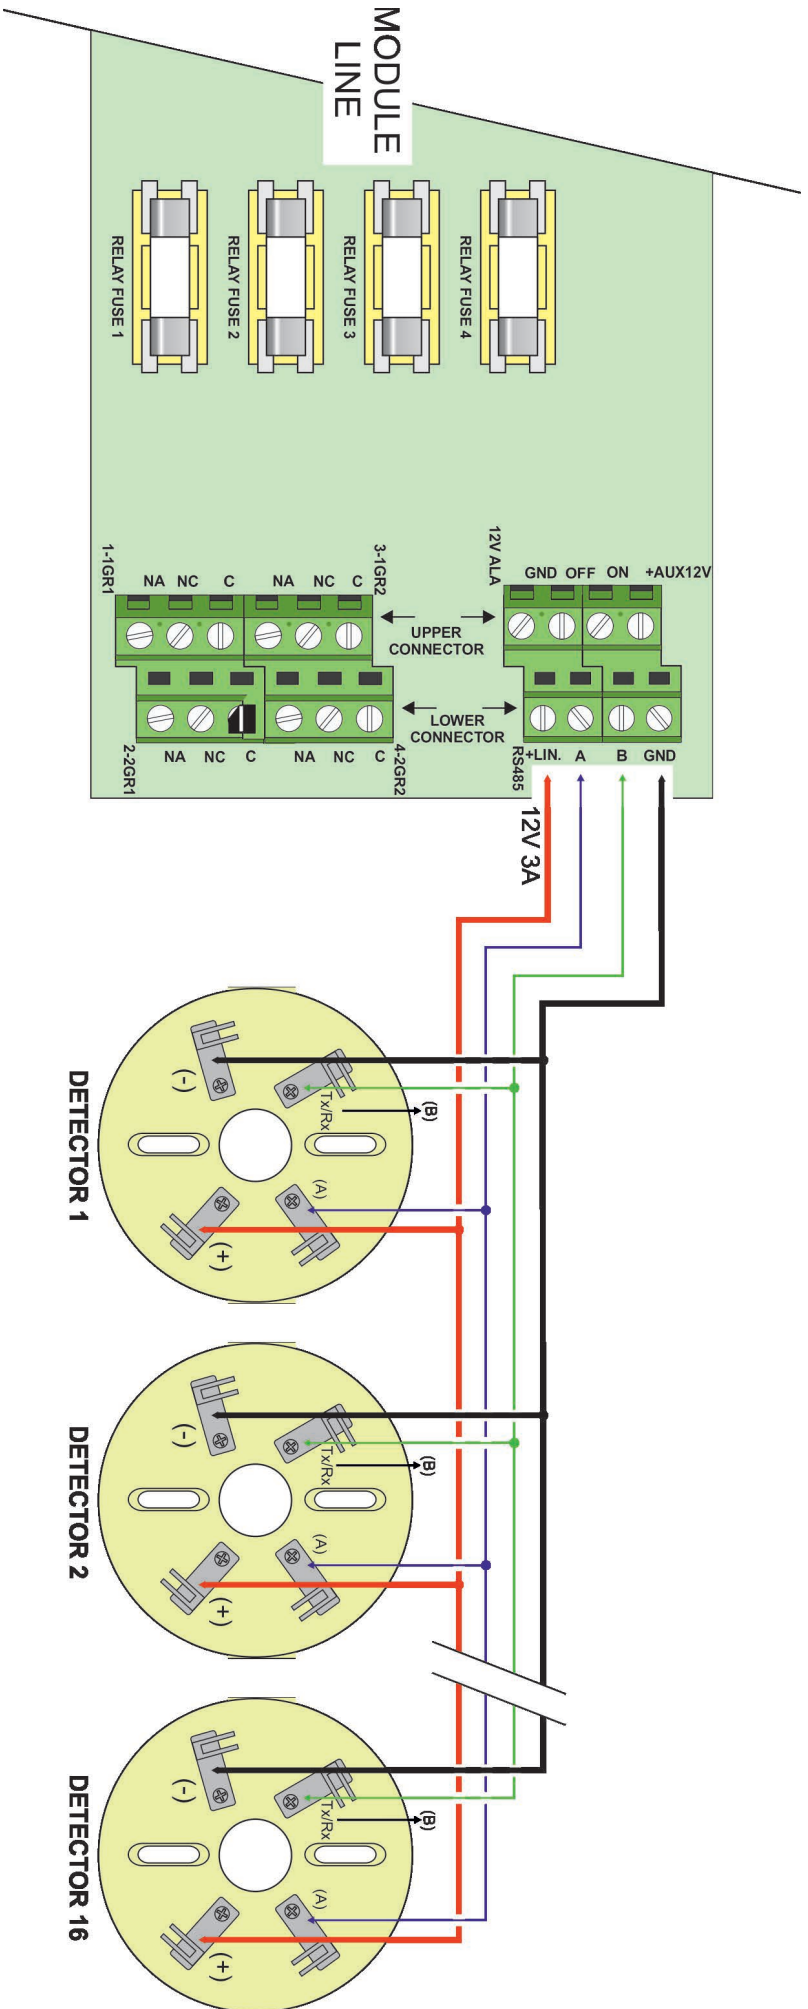


## 42. CONNECTING 8 EURODETECTORS RS485+ ONE 4-20mA DURGAS INTERFACE MODULE

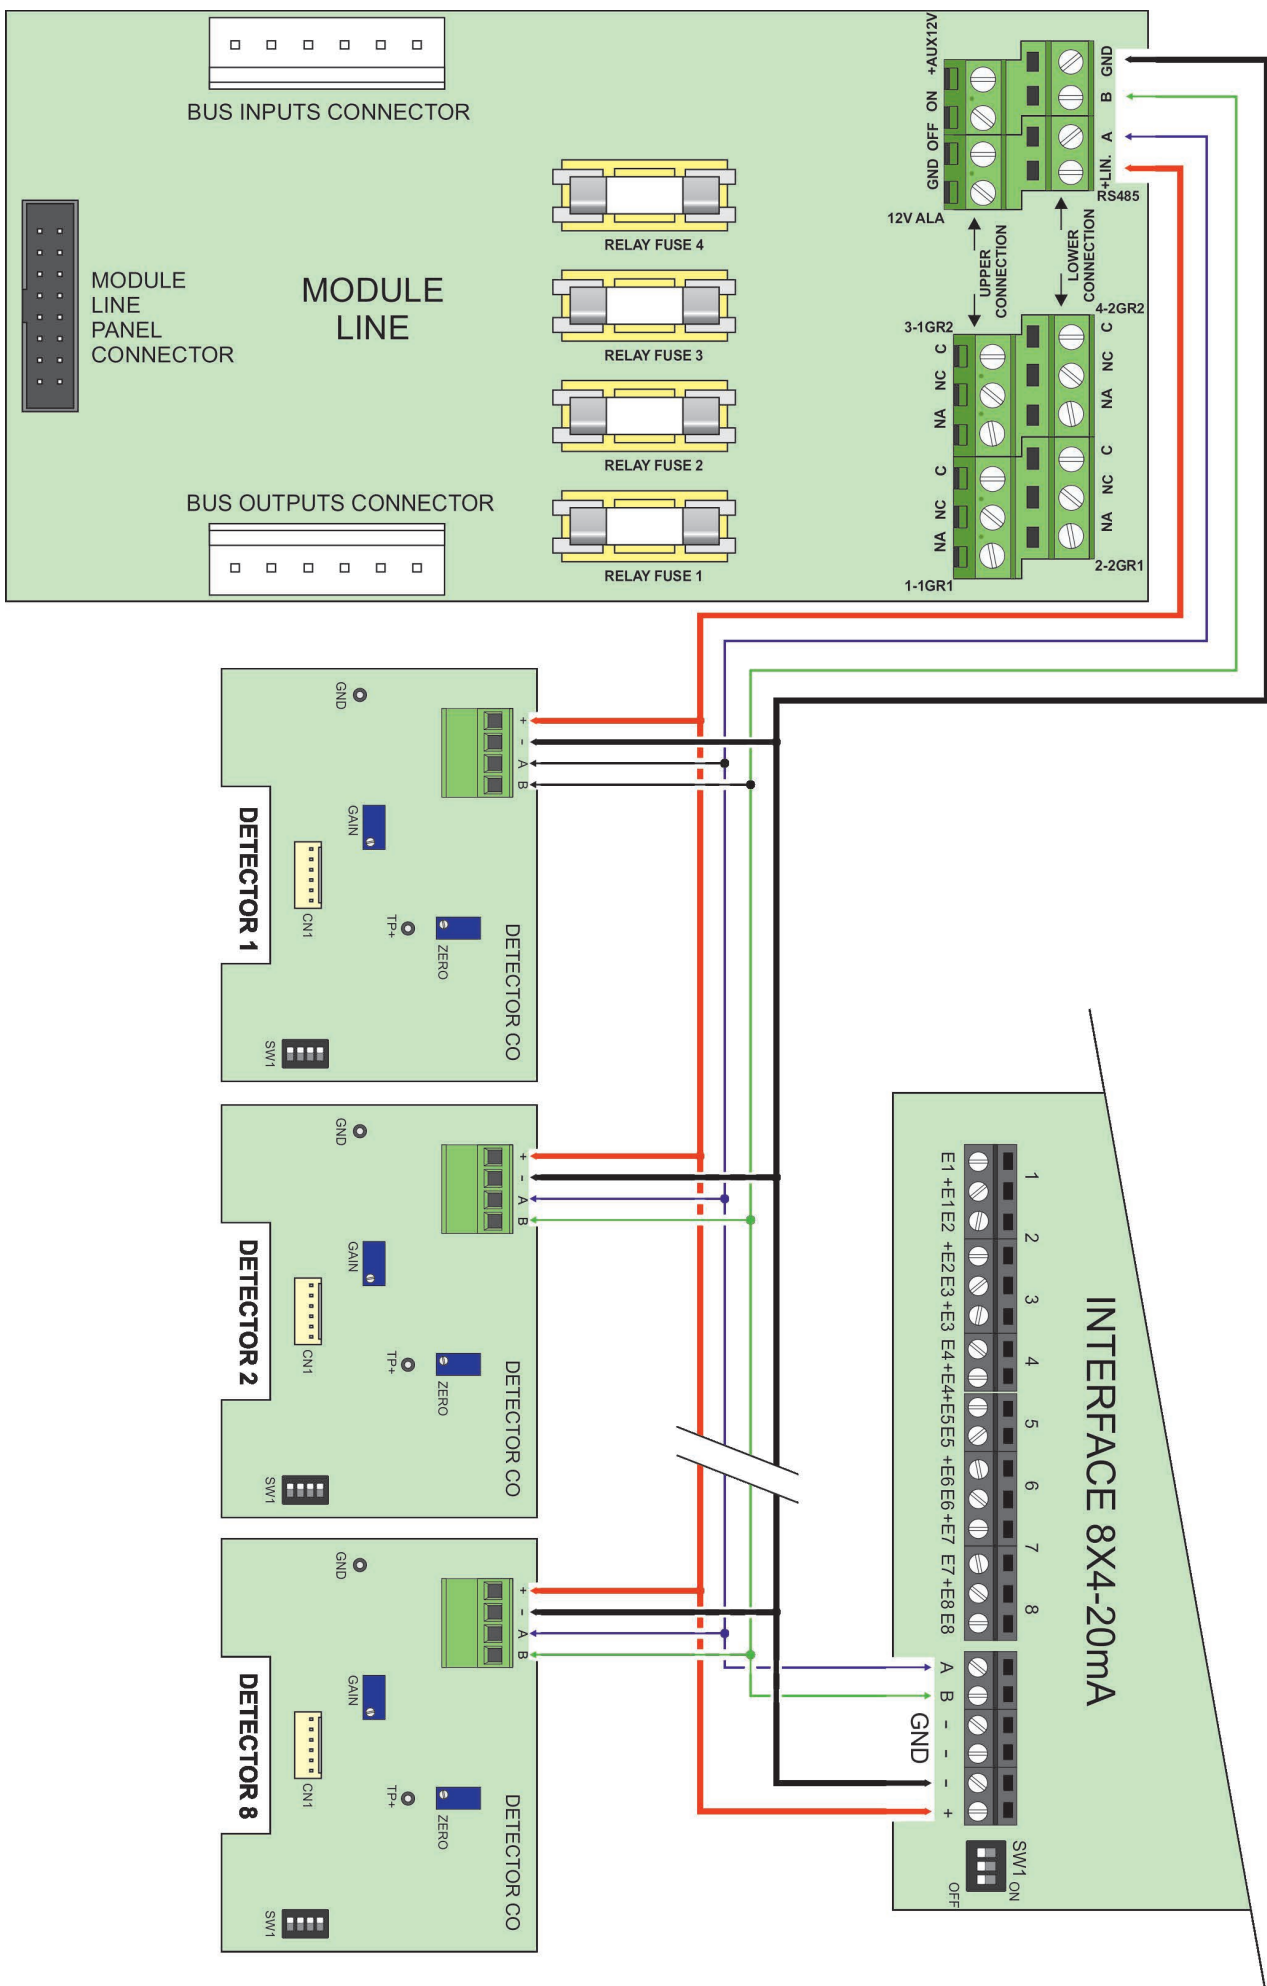





### 4.3. CONNECTING 8 EURODETECTORS RS485+ ONE 4-20mA MODULE DURGAS INTERFACE + ONE RELAY MODULE

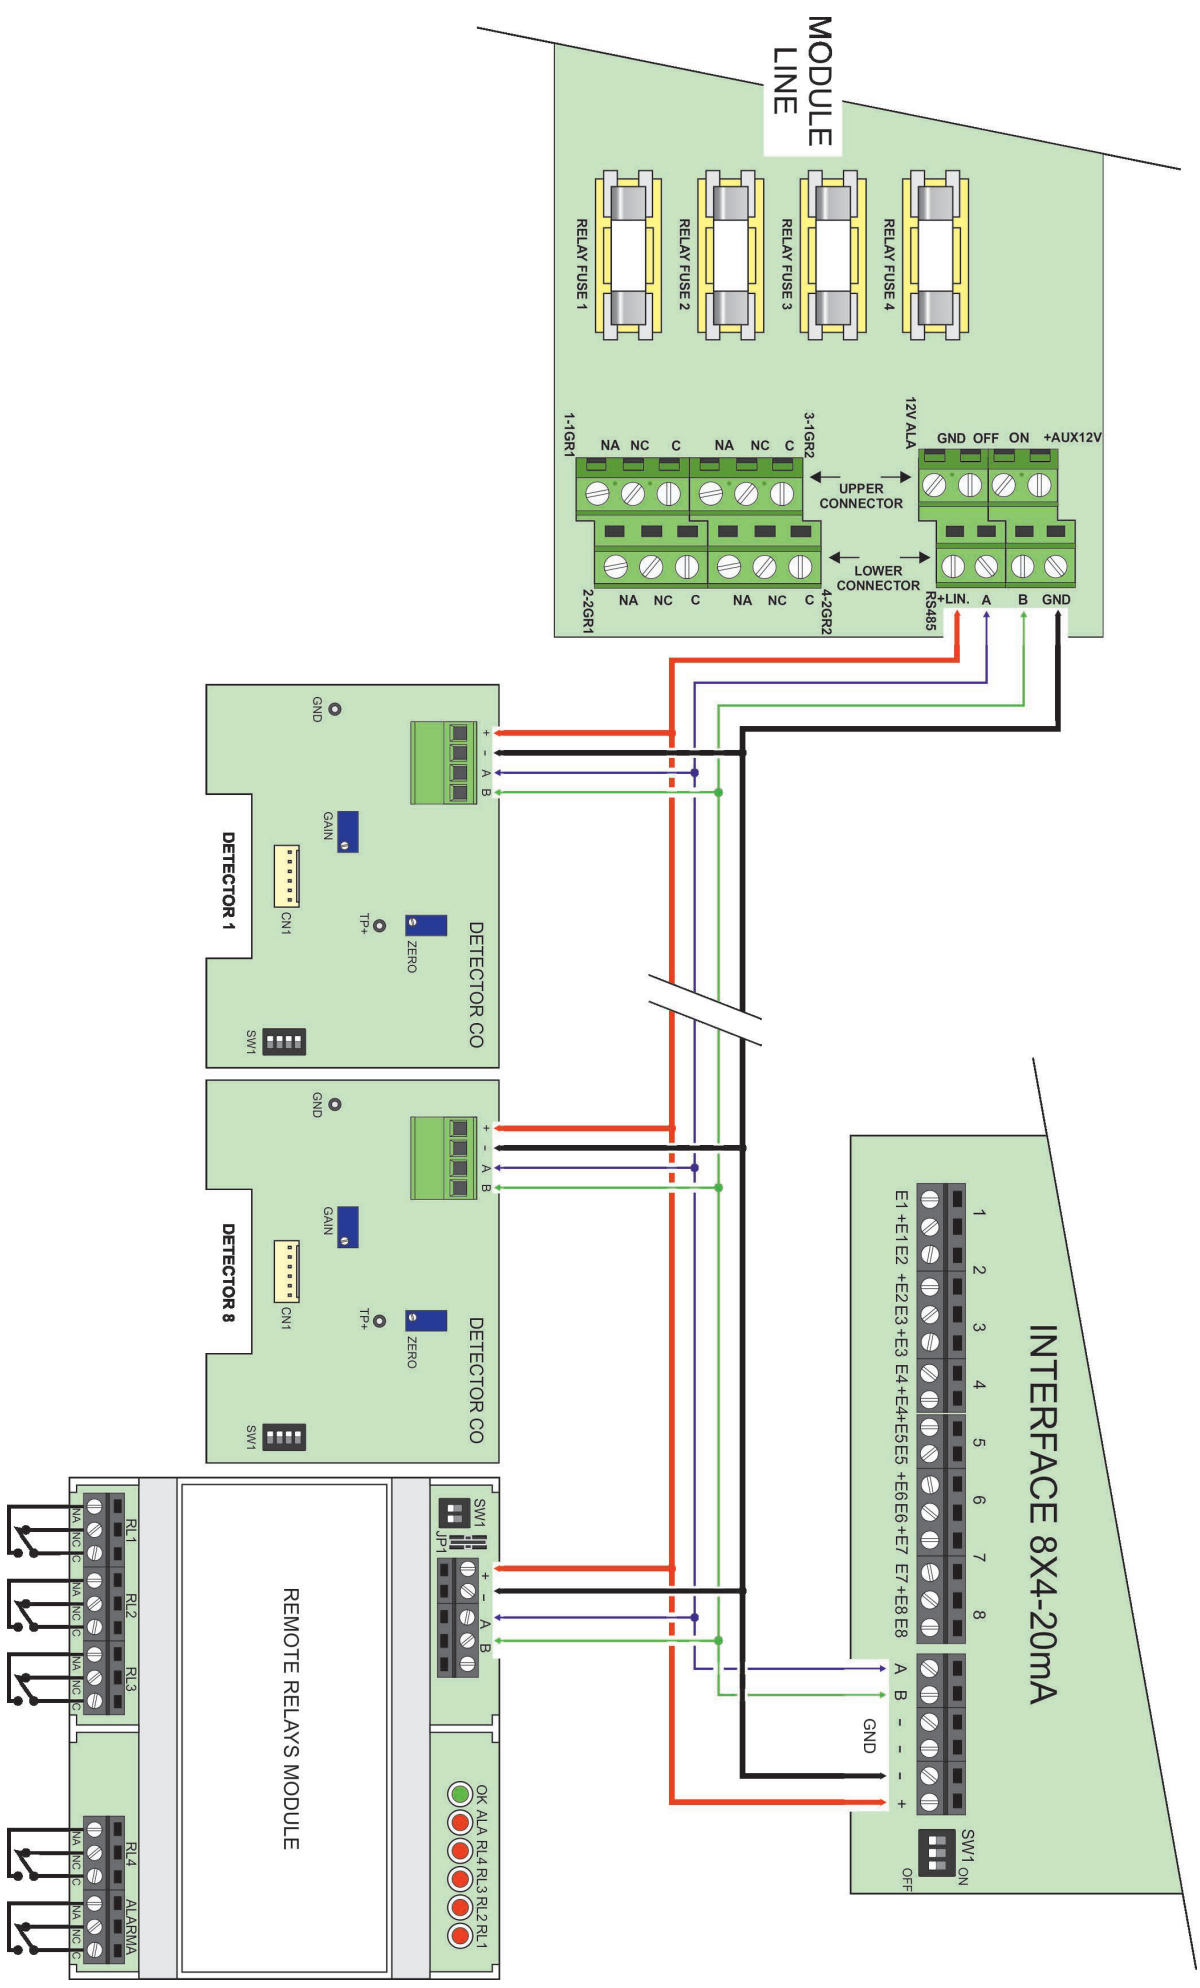

# 44. CONNECTING TWO 4-20mA DURGAS INTERFACE MODULES

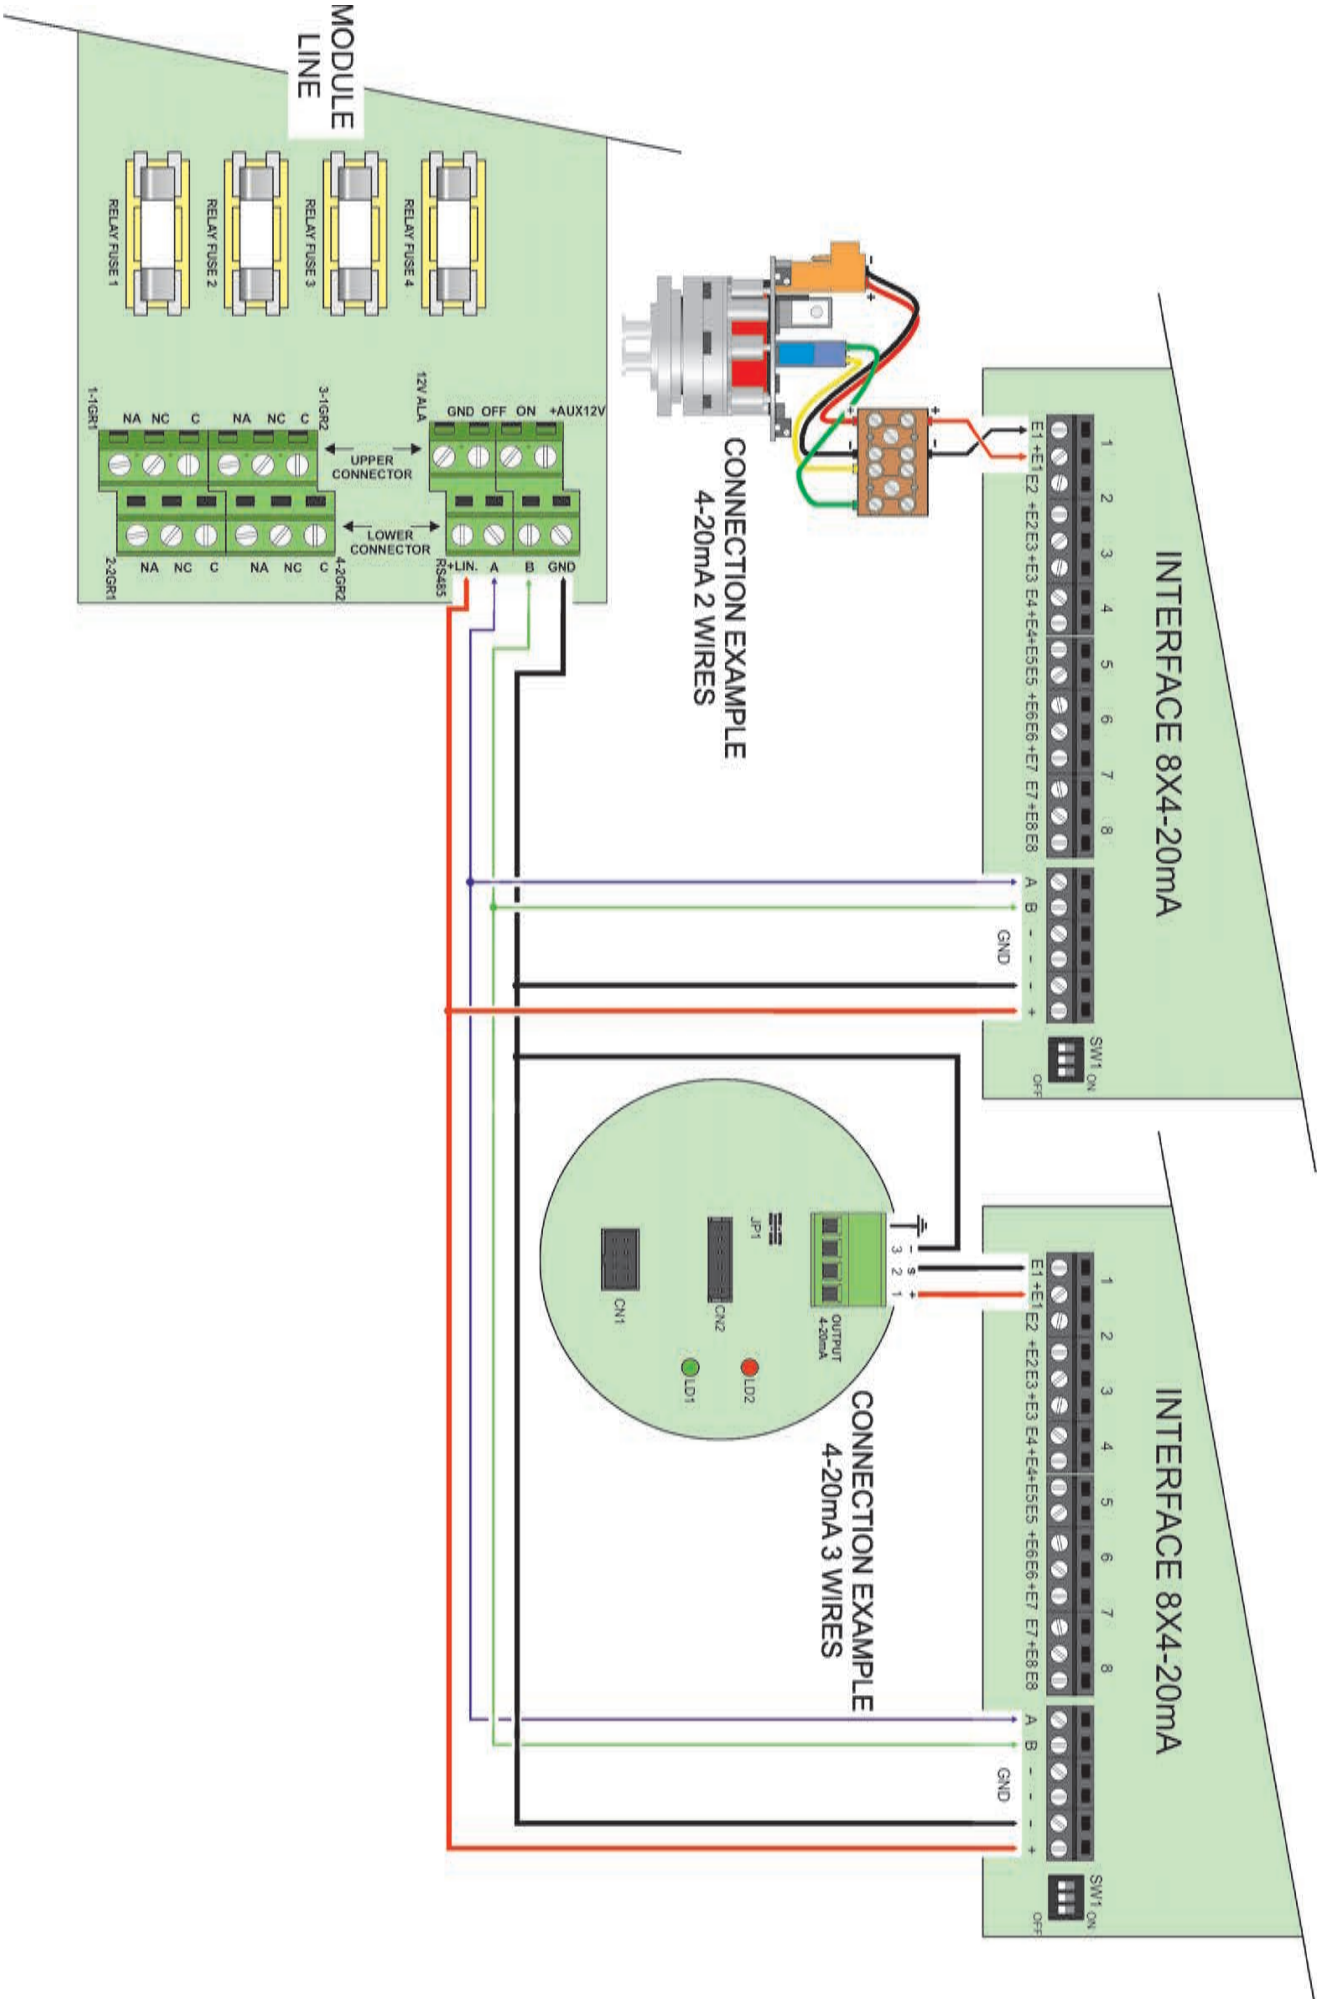

## 4.5. AUXILIARY POWER SUPPLIES INSTALLATION

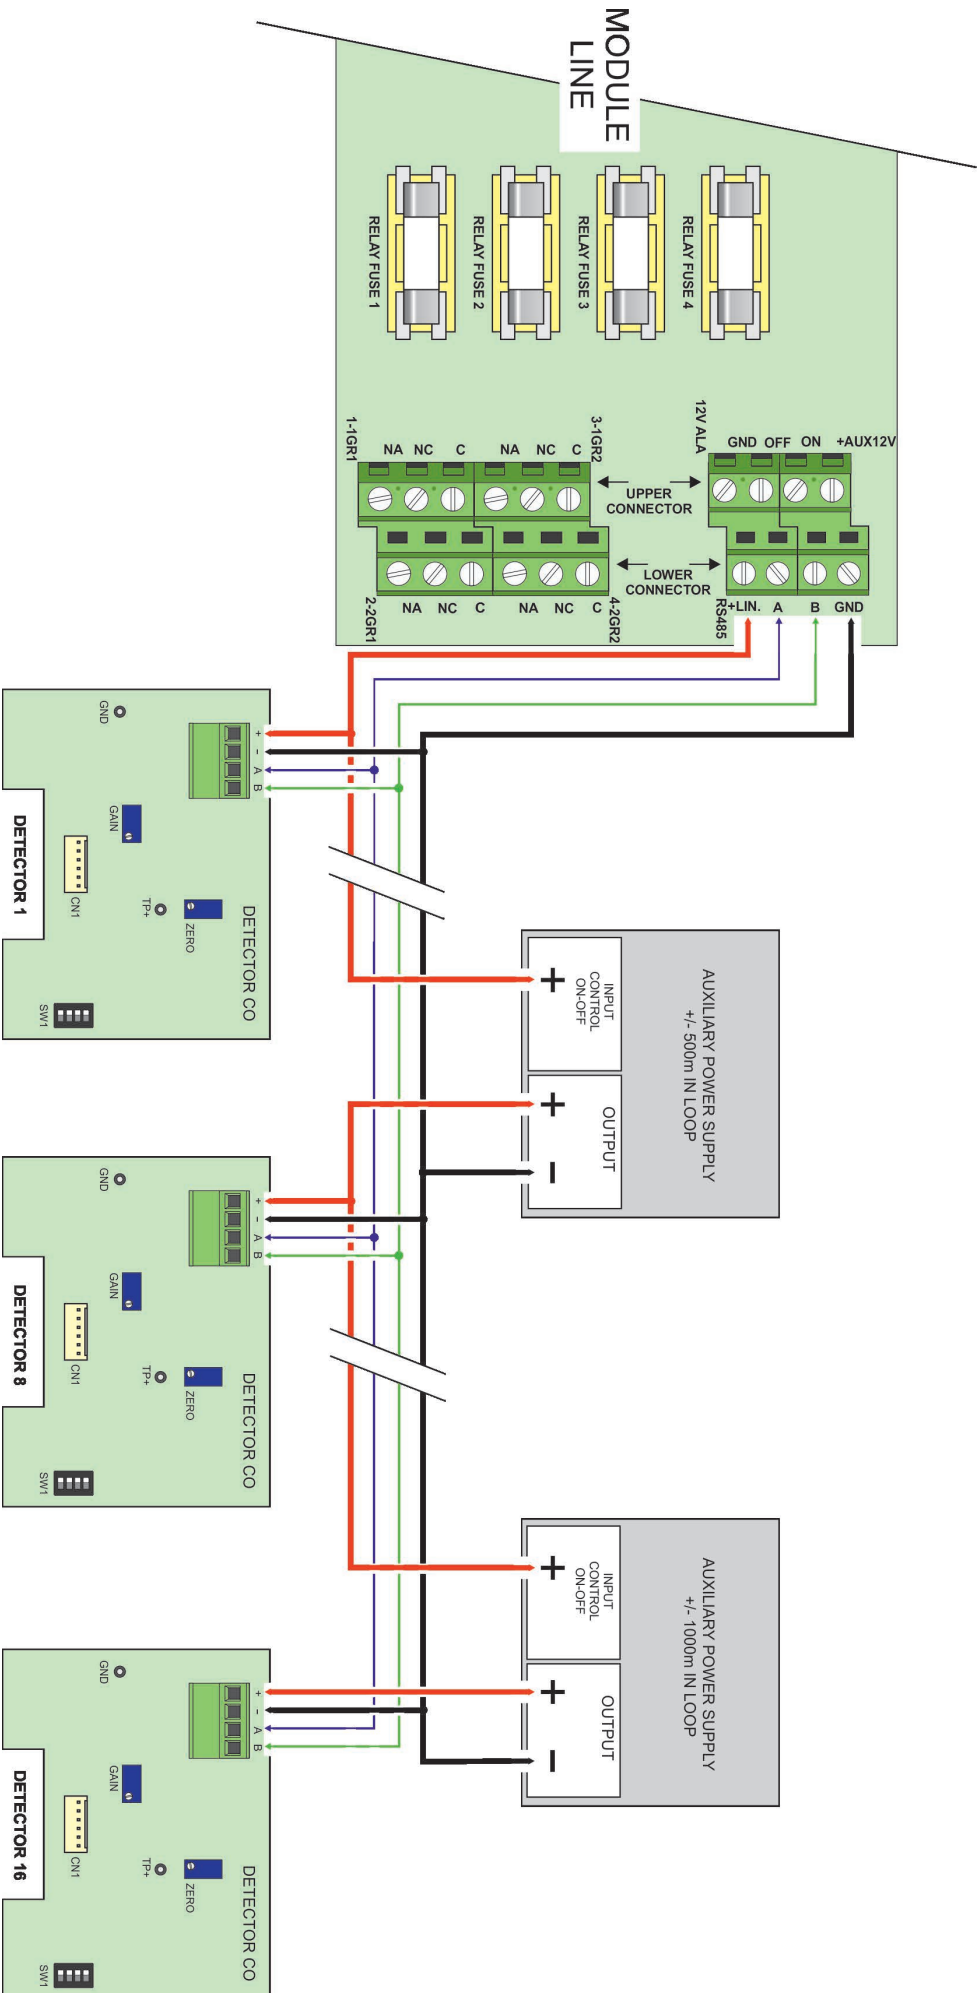



**NOTES:**

## 44. WARRANTY

---

DURAN ELECTRONICA S.L. guarantees that the DURGAS Control Unit has been manufactured subject to strict quality controls.

DURGAS is guaranteed against any manufacturing defect for 1 year from the date of purchase. If during this period of time any anomaly were to be detected, please let your supplier or installer know. The warranty covers the complete repair of the equipment that DURAN ELECTRONICA S.L. technical services consider to be defective, so as to return the equipment to its normal use. This warranty will be valid if the equipment has been installed by a competent person and following the specifications in this manual. Negligent use or installation will exempt DURAN ELECTRONICA S.L. from responsibilities for damages caused to property and/or people and from the fulfillment of the terms of this warranty.

The warranty does not cover:

- Installations, periodical checks, maintenance and sensors past their useful life.
- Breakdowns caused by improper handling, inappropriate use, negligence, overload, inadequate power supply or equipment neglect, voltage shorts, defective installations and other external causes.
- Repairs or adjustments carried out by personnel not authorized by DURAN ELECTRONICA S.L.
- Equipment transport costs.

Compliant with (CO) UNE 23.300:1984 Spanish Standard Certificate LOM 14MOGA3168

Certificates Nr. E20/000004 (DURGAS) and E20/000005 (DURGAS MINI) from AENOR Accredited Notified Body ENAC RD. 2367/1985

DURAN ELECTRONICA S.L. reserves the right to modify the contents of this manual without prior notice.





FS82426



**DURAN<sup>®</sup>**  
**electrónica**

c/ Tomás Bretón, 50  
28045 MADRID, Spain  
Tel: +34 91 528 93 75  
Fax +34 91 527 58 19  
[duran@duranelectronica.com](mailto:duran@duranelectronica.com)  
[www.duranelectronica.com](http://www.duranelectronica.com)

I-manDURGAS-v12